



Monitoring

WiNG System

WiNG-MGR
WiNG-RXT

User Guide

Version 1.5
Firmware Version 3.3.2



Copyright and Trademark Notices

© Raymond & Lae Engineering, Inc. 2015. All rights reserved. RLE® is a registered trademark and SeaHawk™, Falcon™, and Raptor™ are trademarks of Raymond & Lae Engineering, Inc. The products sold by Raymond & Lae Engineering, Inc. are subject to the limited warranty, limited liability, and other terms and conditions of sale set forth at rletech.com.

Revision History

Rev. No.	Date
1.0	June 2017
1.1	June 2017
1.2	October 2017
1.3	March 2018
1.4	November 2018
1.5	July 2019

Manufacturer's Notes

This product is manufactured by RLE Technologies, 104 Racquette Drive, Fort Collins, CO, 80524.

If this product is used in any manner other than that specified by the manufacturer, the protection provided by the equipment may be impaired.

Product Registration

Product registration helps RLE Technologies inform owners of:

- Product upgrades
- Firmware enhancements
- New products and technologies
- Special offers available only to registered users

Any information provided to RLE Technologies through the registration form will be regarded as confidential. RLE will not sell or distribute any of the information to third parties. To read our Privacy Policy, please visit our website: rletech.com.

Technical Support

Personal assistance is available Monday through Friday, from 8:00 a.m. to 5:00 p.m. MST.

A request for assistance may be sent to support@rletech.com.

Otherwise, please call us directly at: **800-518-1519**.

The following information is located on the bottom of each WiNG-MGR unit. Please have this information available whenever a technical support call is placed:

Product Model Number	_____
Product Serial Number	_____
Product Manufacture Date	_____

The WiNG-MGR is not a field-serviceable item and must be sent back to RLE Technologies for mechanical repair. Only RLE certified service personnel is allowed to access the interior of this equipment, and power must be disconnected (unplugged) from the WiNG-MGR any time the unit is mechanically serviced. Physically unplug power from the unit any time you are making wiring connections to or from the WiNG-MGR.

RLE cannot accept an item for repair without a Return Materials Authorization number, which must be provided by RLE.

RLE Product Warranty

Seller warrants to the Ultimate Purchaser (the purchaser who buys for use and not for resale) that all products furnished under this order and which are manufactured by Seller will conform to final specifications, drawings, samples and other written descriptions approved in writing by Seller, and will be free from defects in materials and workmanship. These warranties shall remain in effect for a period of two (2) years after shipment. If the Seller installs the equipment or supplies technical direction of installation by contract, said one year shall run from the completion of installation, provided installation is not unreasonably delayed by Ultimate Purchaser. Parts replaced or repaired in the warranty period shall carry the unexpired portion of the original warranty. A unit placed with the purchaser on consignment and then later purchased will be warranted for two (2) years from the time the Seller receives notification of the Purchaser's intent to purchase said consigned item.

Products are NOT life and safety certified. In no event shall the Seller be liable for loss, damage, or expense directly or indirectly arising from the use of the units, or from any other cause, except as expressly stated in this warranty. Seller makes no warranties, express or implied, including any warranty as to merchantability or fitness for a particular purpose or use. Seller is not liable for and Purchaser waives any right of action it has or may have against Seller for any consequential or special damages arising out of any breach of warranty, and for any damages Purchaser may claim for damage to any property or injury or death to any person arising out of its purchase or the use, operation, or maintenance of the product. Seller will not be liable for any labor subcontracted or performed by Purchaser for preparation of warranted item for return to Seller's factory or for preparation work for field repair or replacement. Invoicing of Seller for labor either performed or subcontracted by Purchaser will not be considered as a liability by the Seller.

The liability of Seller hereunder is limited to replacing or repairing at Seller's factory or on the job site at Seller's option, any part or parts which have been returned to the Seller and which are defective or do not conform to such specifications, drawings or other written descriptions; provided that such part or parts are returned by the Ultimate Purchaser within ninety (90) days after such defect is discovered. The Seller shall have the sole right to determine if the parts are to be repaired at the job site or whether they are to be returned to the factory for repair or replacement. All items returned to Seller for repair or replacement must be sent freight, prepaid to its factory. Purchaser must obtain Seller's Return Goods Authorization prior to returning items. The above conditions must be met if warranty is to be valid. Seller will not be liable for any damage done by unauthorized repair work, unauthorized replacement parts, from any misapplication of the item, or for damage due to accident, abuse, or act of God.

This warranty shall be exclusive of any and all other warranties express or implied and may be modified only by writing signed by any officer of the Seller. This warranty shall extend to the Ultimate Purchaser but to no one else. Accessories supplied by Seller but manufactured by others carry any warranty the manufacturers have made to Seller and which can be passed on to the Ultimate Purchaser.

Seller makes no warranty with respect to whether the products sold hereunder infringe any patent, U.S. or foreign, and Purchaser represents that any specially ordered products do not infringe any patent. Purchaser agrees to indemnify and hold Seller harmless from any liability by virtue of any patent claims where Purchaser has ordered a product conforming to Purchaser's specifications, or conforming to Purchaser's specific design.

Purchaser has not relied and shall not rely on any oral representation regarding the Product sold hereunder and any oral representation shall not bind Seller and shall not be part of any warranty.

Contents

1	System Overview	11
	Product Description	11
	Indicators	11
	Physical Connections	12
	SW1 Switch Settings	13
2	Getting Started	15
	Installation	15
	Wiring	16
	Power Supply and Ground Connections	16
	Wired Relay Outputs	17
	Connectivity	18
	RJ45 Ethernet Connection	18
	EIA-232 COM Connection	19
	Modbus EIA-485 Connections	19
	Antenna	20
	Communication: Set the IP Address	21
	Set the IP Address Using a Web Browser	21
	Set the IP Address via EIA-232 Connection	22
	Deploy Your Sensors	23
	Use the Sensor Discovery Wizard	23
	Manually Launch Sensor Auto Discovery	23
	Set Notification Parameters For Your Sensors	23
	Global Sensor Settings	23
	Individual Sensor Configuration	24
	Sensor Mounting Tips	24
3	Web Interface	25
	Header Icons	27
	Alarm Bell	27
	Relay Output Status	27
	Sensor Discovery Wizard	27
	Refresh	29
	Support Information	29
	Sign In/Out	29
	Sensors	30
	Individual Sensor Pages	31
	Readings	31
	Wireless Network Metrics	31
	Activity History	32
	Sensor Configuration	33
	Sensor Objects	36
	Wireless Network Metrics	37
	Alarms	38
	System Configuration	39
	Identity	39
	IP	40

Time	42
Relay Outputs	44
Communications	45
EIA-485	45
Modbus	47
BACnet	48
DNS	50
SMTP	51
E-mail	52
SNMP	53
Admin.	55
XML/Logging	55
Firmware	56
Sensors	58
Radios	60
Alarms	62
Users	65
Radius/LDAP	66
4 Modbus Communications	69
Implementation Basics	69
Modes of Transmission	69
Slave Address Field	69
Function Field	69
Data Field	70
Error Check (Checksum) Field	70
Exception Responses	70
Packet Communications for the WiNG-MGR	70
Function 03: Read Output Registers	70
Function 06: Preset Single Register & Function 16: Preset Multiple Registers	71
RTU Framing	72
5 WiNG-RXT	73
Add A WiNG-RXT Range Extender To Your System	73
Safety Precautions	73
A Communications Objects	75
B Update Firmware	79
Load the Application Firmware	80
Load the Firmware Using TFTP	81
C Alternate Channel Pair Communications	83
WiNG Sensor Communications	83
Change the Sensor's Channel Pair	83
Manager Communications	84
Change the Manager's Channel Pair	84
Add a Range Extender to A WiNG System	85
D Troubleshooting	87
WiNG-MGR Troubleshooting	87
Sensor Troubleshooting	89
E Technical Specifications	91

Figures

1	System Overview	11
	Figure 1.1 WiNG-MGR Physical Connections	12
2	Getting Started	15
	Figure 2.1 Power Supply and Grounding Connections	16
	Figure 2.2 Wired Relay Output Connection	17
	Figure 2.3 Ethernet Connection to a PC Using a Crossover Cable	18
	Figure 2.4 Ethernet Connection to a PC on a Subnet, Using a Hub/Switch and CAT5 Cables ...	18
	Figure 2.5 EIA-232 COM Connection	19
	Figure 2.6 EIA-485 Connection	19
	Figure 2.7 Antenna Connections	20
	Figure 2.8 Sensor Serial Number and Index Number	24
3	Web Interface	25
	Figure 3.1 Dashboard Navigation	25
	Figure 3.2 Relay Output Status	27
	Figure 3.3 Sensor Discovery Wizard Modal	27
	Figure 3.4 Sensor Discovery Wizard - Select the Sensors for This WiNG-MGR	28
	Figure 3.5 Close the Sensor Discovery Wizard	28
	Figure 3.6 Support Information	29
	Figure 3.7 Sensors Page	30
	Figure 3.8 Individual Sensor Page - Readings Tab	31
	Figure 3.9 Individual Sensor Page - Wireless Network Metrics Tab	32
	Figure 3.10 Individual Sensor Page - Activity History Tab	32
	Figure 3.11 Individual Sensor Page - Sensor Configuration Tab	33
	Figure 3.12 Individual Sensor Page - Sensor Objects Tab	36
	Figure 3.13 Wireless Network Metrics Page	37
	Figure 3.14 Alarms Page	38
	Figure 3.15 Identity Page	39
	Figure 3.16 IP Page	40
	Figure 3.17 Time Configuration	42
	Figure 3.18 Relay Output Configuration	44
	Figure 3.19 EIA-485 Configuration	45
	Figure 3.20 Modbus Configuration	47
	Figure 3.21 BACnet Configuration	48
	Figure 3.22 DNS Configuration	50
	Figure 3.23 SMTP Configuration	51
	Figure 3.24 Email Configuration	52
	Figure 3.25 SNMP Configuration	53
	Figure 3.26 XML/Logging Page	55
	Figure 3.27 Firmware Page	56
	Figure 3.28 Sensors Page	58
	Figure 3.29 Radios Page	60
	Figure 3.30 Alarms Page	62
	Figure 3.31 Users Page	65
	Figure 3.32 Radius/LDAP Page	66

4	Modbus Communications	69
5	WiNG-RXT	73
A	Communications Objects	75
B	Update Firmware	79
	Figure B.1 Admin Menu, Firmware Tab - Configuration File Download	79
	Figure B.2 Admin Menu, Firmware Page - Firmware File Upload	80
C	Alternate Channel Pair Communications	83
	Figure C.1 Sensor Channel Pair Button	83
D	Troubleshooting	87
E	Technical Specifications	91

Tables

1	System Overview	11
Table 1.1	WiNG-MGR LED Indicators	11
Table 1.2	WiNG-MGR Physical Connection Descriptions	12
Table 1.3	SW1 Switch Settings	13
2	Getting Started	15
3	Web Interface	25
Table 3.1	Dashboard Navigation Options	25
Table 3.2	Sensor Page Field Descriptions	30
Table 3.3	Wireless Network Metrics Field Descriptions	32
Table 3.4	Individual Sensor Page - Sensor Configuration Tab Options	33
Table 3.5	Wireless Network Metrics Field Descriptions	37
Table 3.6	Identity Configuration Options	39
Table 3.7	IP Configuration Options	40
Table 3.8	Time Configuration Options	42
Table 3.9	Relay Output Configuration Options	44
Table 3.10	EIA-485 Configuration Options	45
Table 3.11	Modbus Configuration Options	47
Table 3.12	BACnet Configuration Options	48
Table 3.13	DNS Configuration Options	50
Table 3.14	SMTP Configuration Options	51
Table 3.15	Email Configuration Options	52
Table 3.16	SNMP Configuration Options	53
Table 3.17	XML/Logging Configuration Options	55
Table 3.18	Firmware Configuration Options	56
Table 3.19	Sensor Configuration Options	58
Table 3.20	Radio Configuration Options	60
Table 3.21	Alarms Configuration Options	62
Table 3.22	Users Configuration Options	65
Table 3.23	Radius/LDAP Configuration Options	66
4	Modbus Communications	69
Table 4.1	Exception Codes	70
Table 4.2	Read Output Registers Packet Structure	70
Table 4.3	Read Output Registers	71
Table 4.4	Preset Single and Multiple Registers	71
Table 4.5	Response Sample	72
5	WiNG-RXT	73
A	Communications Objects	75
Table A.1	Modbus Registers, BACnet Instances, and SNMP OIDs	76
B	Update Firmware	79
C	Alternate Channel Pair Communications	83
D	Troubleshooting	87

E Technical Specifications 91

Table E.1 WiNG-MGR Technical Specifications 91

Table E.2 WiNG-RXT Technical Specifications 92

Table E.3 WiNG Sensor Technical Specifications 93


SYSTEM OVERVIEW

1.1. Product Description

The WiNG-MGR is a wireless sensor network manager that receives signals from wireless devices and relays them to facilities monitoring systems as SNMP, Modbus TCP/IP, Modbus RTU, BACnet/IP, and BACnet MS/TP signals.

1.2. Indicators

The LEDs on the WiNG-MGR indicate the status of a variety of actions.

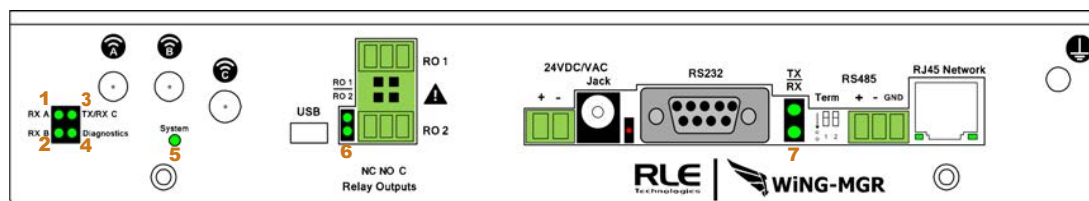

LED	Label	Description
1	RX A	The WiNG-MGR is receiving information over antenna A.
2	RX B	The WiNG-MGR is receiving information over antenna B.
3	TX /RX C	The WiNG-MGR is either receiving or transmitting information over antenna C
4	Diagnostics	Used for customer support and troubleshooting

Table 1.1 WiNG-MGR LED Indicators

LED	Label	Description
5	System	Indicates on which radio communications channel set the manager is operating:
	900MHz WiNG-MGR	<ul style="list-style-type: none"> Blue blink pattern - WiNG-MGR is operating on the primary 900MHz channel set. Green blink pattern - WiNG-MGR is operating on the alternate 900MHz channel set.
	868MHz WiNG-MGR	<ul style="list-style-type: none"> Purple blink pattern - WiNG-MGR is operating on the primary 868MHz channel set. Yellow blink pattern - WiNG-MGR is operating on the alternate 868MHz channel set.
6	RO1 RO2	The relay output is activated
7	RS485 RX TX	RS485 Receive/Transmit status LED

Table 1.1 WiNG-MGR LED Indicators

1.3. Physical Connections

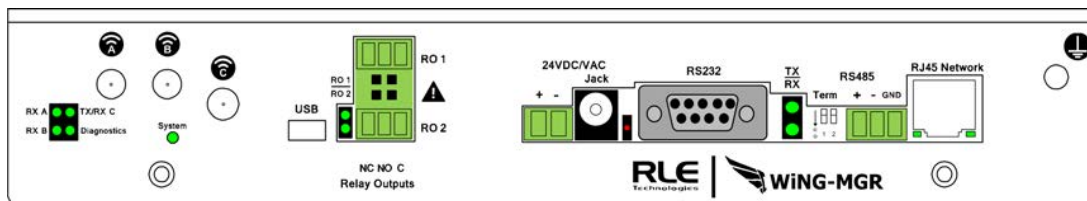


Figure 1.1 WiNG-MGR Physical Connections

Item	Description
Antenna A	RP-SMA connector
Antenna B	RP-SMA connector
Antenna C	RP-SMA connector
USB	USB mini B connector
RO 1	Relay output 1 (NC/NO/C)
RO 2	Relay output 2 (NC/NO/C)
	Caution! Potential high voltage connection
24 VDC/VAC	Power terminal block
Jack	Wall adapter connector
RS232	DB9 female connector port
RS485 Term	1 (unused); 2 100 ohm termination switch
RS485 Port	RS485 circuit connector (+ - GND)
RJ45 Network	10/100 BASE-T connector Ethernet port
	Earth ground connection

Table 1.2 WiNG-MGR Physical Connection Descriptions

1.4. SW1 Switch Settings

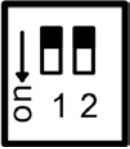
Status	Indicator	Figure
SW1-1	Not used	
SW1-2	EIA-485 Termination (On=100 ohm termination)	

Table 1.3 SW1 Switch Settings

GETTING STARTED

2.1. Installation

The WiNG-MGR can be rack or wall mounted, or left free standing. The WiNG-MGR ships with rack mount tabs. Wall mount tabs are sold separately.

- ◆ Mount the WiNG-MGR in either the front or the back of a 19-inch rack - You will need two of RLE's L-shaped rack mount tabs (included with the WiNG-MGR). Remove the screws from the sides of the WiNG-MGR, put the tabs in place, and reapply the screws. Mount the device in the front or the back of your rack. Use the preferred anchoring method as suggested by the rack manufacturer to mount the unit securely.
- ◆ If you would prefer to mount the WiNG-MGR on a wall, wall mount tabs (sold separately) provide a secure solution. Remove the screws from the sides of the WiNG-MGR, put the wall mount tabs in place, and reapply the screws. Mount the device securely in the desired location.

2.2. Wiring

2.2.1 Power Supply and Ground Connections

RLE Technologies recommends powering the WiNG-MGR from a UPS supply so the device can send alarm notifications during a power outage. The device can be powered through either the jack or the power supply terminal block, but you must use only one of these power options at a time - you cannot connect the power jack and terminal block power simultaneously or damage will occur. Power must be supplied from a Class I or Class II limited energy circuit, 24V with a maximum available current of 6A or a Class 2 circuit. When necessary, be sure to unplug the unit for complete disconnection.

- 1 If you would like to connect protected Earth ground to the unit, a threaded insert is provided on the enclosure. Connect an 18AWG ground wire from the threaded insert ground terminal to a suitable Earth ground.
- 2 Plug the provided wall adapter into the jack at P1 and a UPS outlet. The wall adapter has a five foot (1.524m) power cord.
- 3 If you're providing your own power supply, connect 24VDC to the unit through the power terminal block.

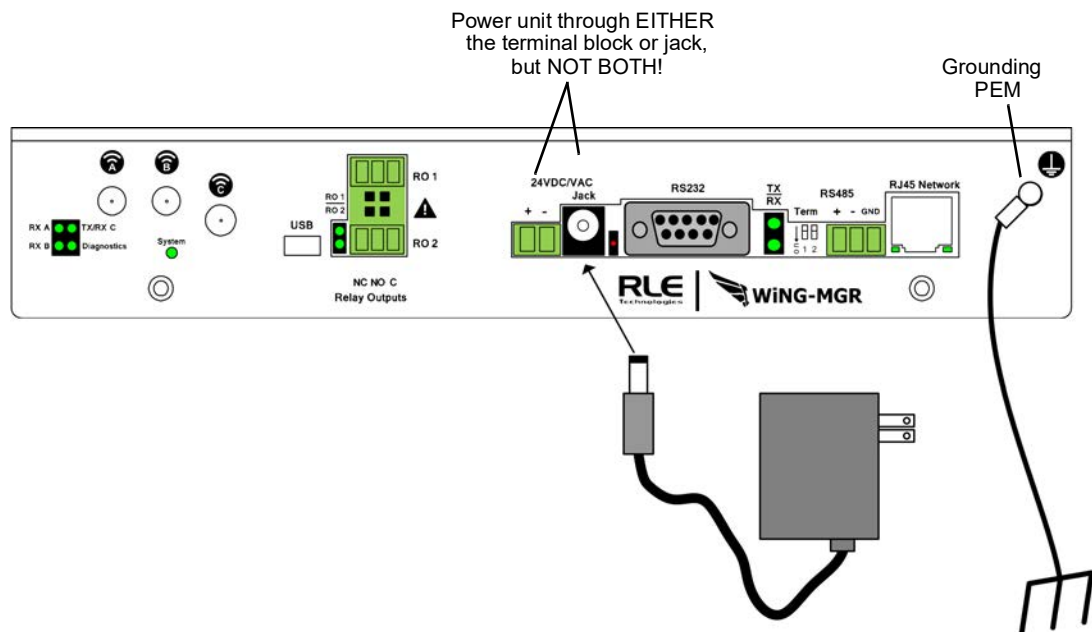


Figure 2.1 Power Supply and Grounding Connections

2.2.2 Wired Relay Outputs

The WiNG-MGR accommodates two wired relay outputs. Any relay output connections must be made with double insulated wire (jacketed multi-conductor cable). If you wish to use this functionality, wire the connections now. Your wiring may look similar to the connections shown here:

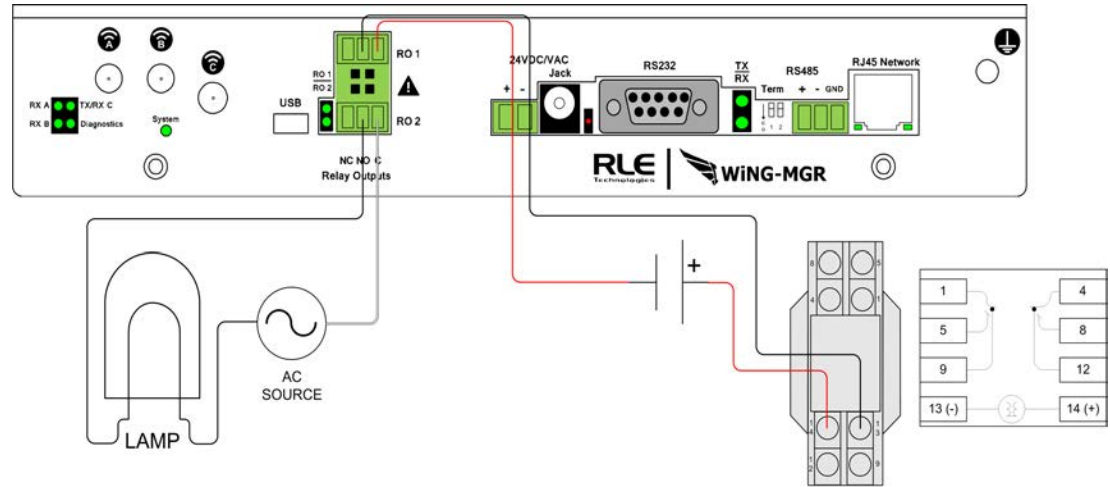


Figure 2.2 Wired Relay Output Connection

2.3. Connectivity

2.3.1 RJ45 Ethernet Connection

The WiNG-MGR has an internal 10/100BASE-T Ethernet port that is used for configuration. The Ethernet port supports Web browser access, email (SMTP), BACnet slave, Modbus slave, and SNMP. The device can connect directly to a PC with a crossover cable, or it can connect to a PC through a hub or switch, with CAT5 cables.

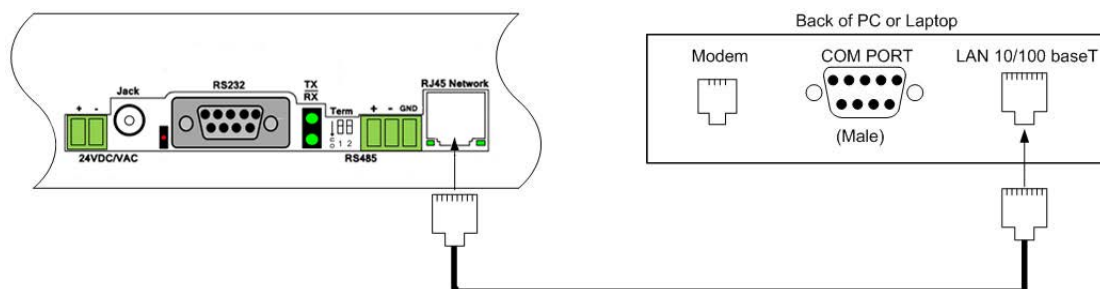


Figure 2.3 Ethernet Connection to a PC Using a Crossover Cable

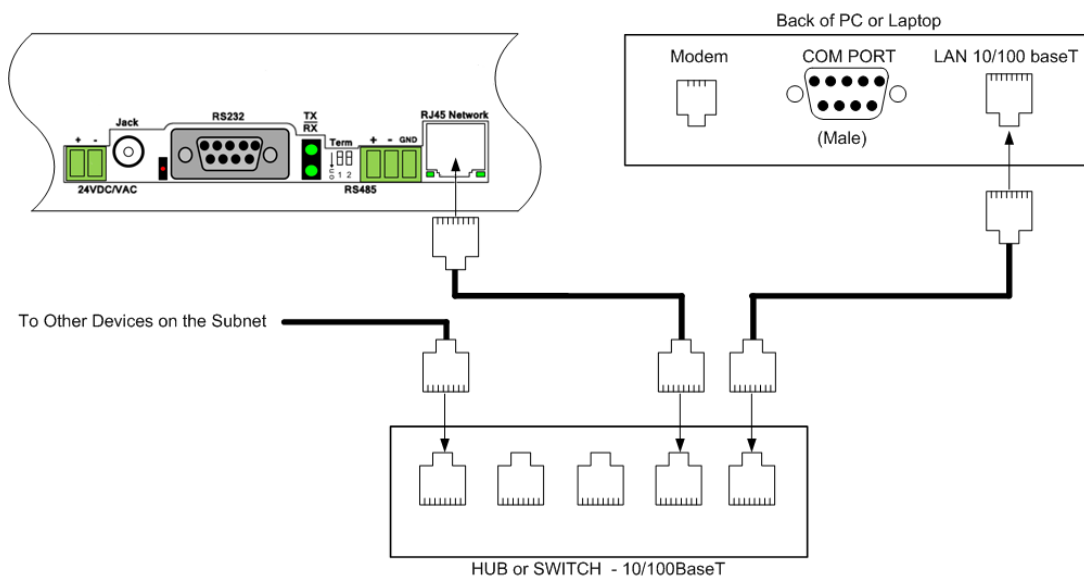


Figure 2.4 Ethernet Connection to a PC on a Subnet, Using a Hub/Switch and CAT5 Cables

2.3.2 EIA-232 COM Connection

The WiNG-MGR can be connected directly to a PC through its EIA-232 port. This is useful for IP configuration, firmware downloads, and troubleshooting. The EIA-232 connection is only used as a temporary connection. Connect the straight through, 9-pin serial cable as shown in Figure 2.5.

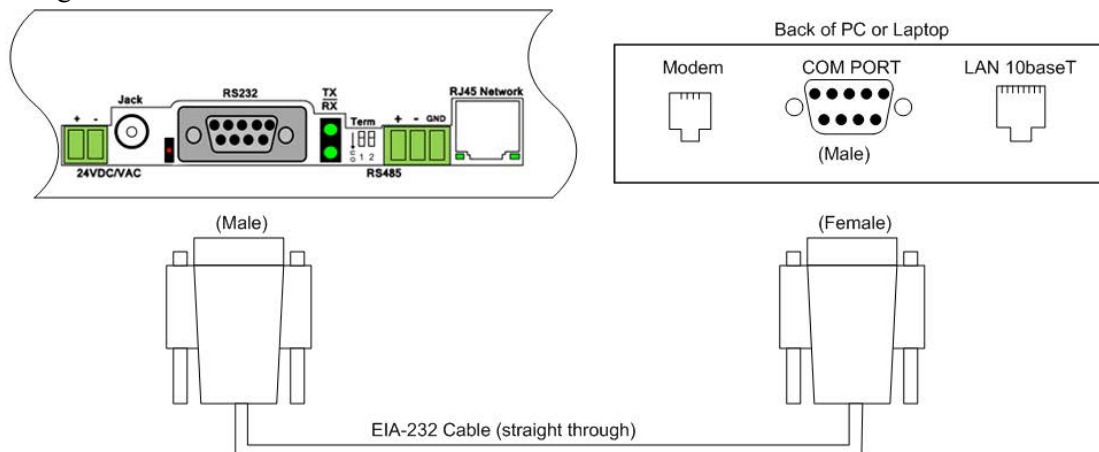


Figure 2.5 EIA-232 COM Connection

2.3.3 Modbus EIA-485 Connections

The WiNG-MGR can function as a Modbus Slave over an EIA-485, 2-wire hardware connection, as shown in Figure 2.6.

When using the EIA-485 port for Modbus RTU communication, RLE Technologies recommends an 18AWG shielded twisted pair stranded copper wire for the connection, using no more than 2000 feet (609.6m) of wire at this specification. If longer runs are needed, please contact RLE Technologies.

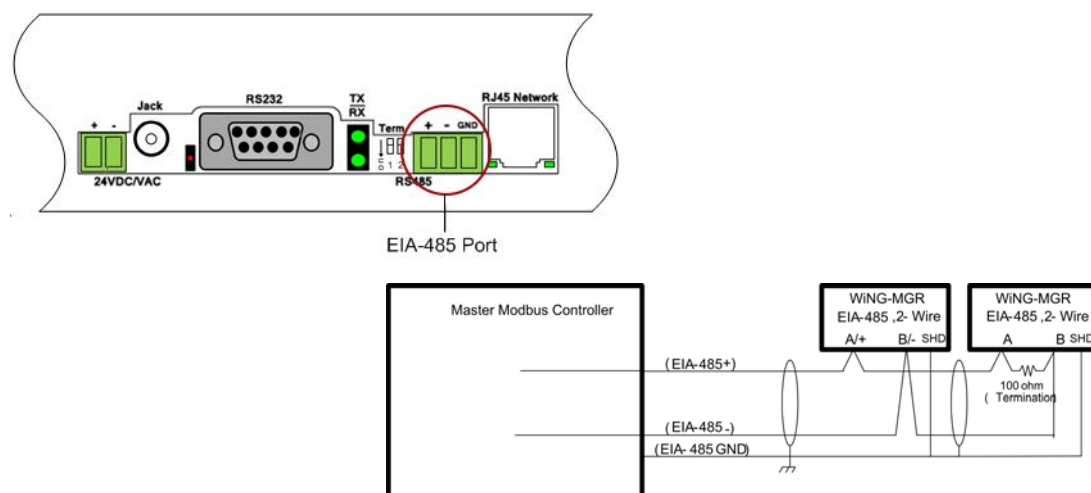


Figure 2.6 EIA-485 Connection

2.3.4 Antenna

The WiNG-MGR is shipped with three 900 MHz antennas. Plug each antenna into its appropriate jack on the back of the WiNG-MGR and tighten the connections firmly.

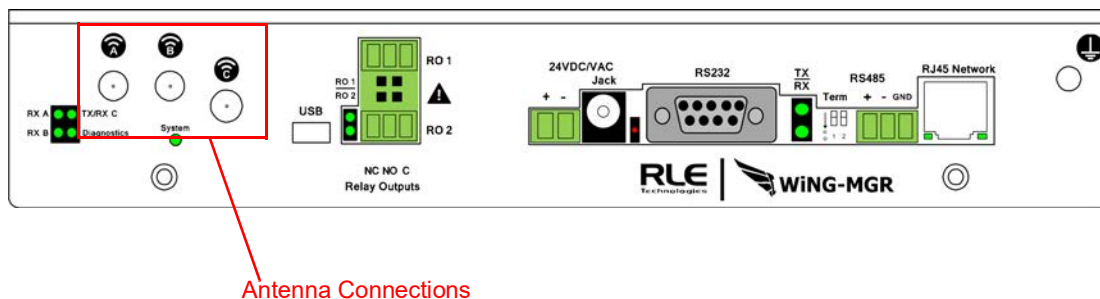


Figure 2.7 Antenna Connections

Once the antennas are secure, you'll need to ensure proper antenna position. Antennas A and B can be close together, but to avoid signal interference they both need to be as far away from antenna C as possible. Extend the leader cables on the antennas to their fullest lengths and secure the antennas as far away from the WiNG-MGR - and as high off the ground - as possible.

2.4. Communication: Set the IP Address

The WiNG-MGR will not communicate over a user's network the first time it is connected. This is because the manufacturer programs the device with a default IP address: 10.0.0.188, Subnet Mask: 255.255.255.0. This default address must be changed to an IP address that corresponds with the user's network before the WiNG-MGR can communicate over the network. There are two ways to set the WiNG-MGR's IP address: via the web browser or via the EIA-232 interface.

2.4.1 Set the IP Address Using a Web Browser

Attention: If you have not set an IP address before, consult your IT Department for support.

NOTE The default IP address for the WiNG-MGR is 10.0.0.188

The default Subnet Mask is 255.255.255.0

There is no default user name or password.

- 1 Contact your IT Department to obtain an available IP address, Subnet Mask, and default Gateway.
- 2 Plug a crossover network cable into the laptop or workstation that will be used to configure the WiNG-MGR.
- 3 You'll need to change the IP address and Subnet Mask of your computer so it can communicate with the WiNG-MGR in its factory-configured state. Before you change anything, write down the original IP address and Subnet Mask of your computer - you'll need to revert back to these original settings once the WiNG-MGR is configured.
- 4 Change the IP address and Subnet Mask of the computer from its existing address to one that will allow it to communicate with the WiNG-MGR, such as 10.0.0.189. It may be beneficial to set the IP address to one that is one number different from the WiNG-MGR's IP address (10.0.0.188).
- 5 Connect the other end of the crossover cable to the Ethernet port on the back of the WiNG-MGR.
- 6 Access the WiNG-MGR through a Web browser — type the WiNG-MGR's IP address (10.0.0.188) into the location bar.
- 7 From the WiNG-MGR's Dashboard, select the **System Configuration** link on the left side of the page. Then click the **IP** link to access the IP configuration tab. Change the IP address, Subnet Mask, and default Gateway to the one provided by your IT Department, or change it to 0.0.0.0 to enable DHCP. Press the **Save Changes** button. The WiNG-MGR will save the new IP address, Subnet Mask and default Gateway and then reboot itself.
- 8 Change the IP address of the computer back to its original IP address. If the computer was configured as DHCP (the network domain controller assigns an IP address) return it to this state. This may require assistance from your IT Department, or you may need to consult the computer's manual.
- 9 The computer and the WiNG-MGR are now both configured to communicate on the network. Both should be accessible via the network. Connect the PC and the WiNG-MGR to the network. From the PC web browser, type in the new IP address of the WiNG-MGR. Enter the user name and password as stated above to verify network access to the device.

2.4.2 Set the IP Address via EIA-232 Connection

To use the EIA-232 interface:

- 1 Contact your IT Department to obtain an available IP address, Subnet Mask, and default Gateway.
- 2 Use a 9-pin male-female straight through serial cable to connect the EIA-232 port on the WiNG-MGR to a terminal or PC running terminal emulation software (HyperTerminal).
- 3 Set the appropriate communication port to **9600 baud, NO parity, 8 data bits, 1 stop bit, (9600/N/8/1), and no software or hardware flow command.**
- 4 Once the terminal emulation software starts, press **Enter** on the keyboard and the WiNG-MGR boot prompt should appear, (MGR> or MGR boot>). If the boot prompt does not appear, check the communication settings and make sure the unit is powered on.
- 5 From the boot prompt type `IP` then type one space and type the IP address your IT Department provided for the unit. If you'd like to enable DHCP, type `0.0.0.0` as the IP address. Press the enter key. For example, `IP 192.168.103.211` The WiNG-MGR will reboot after the IP address is changed.
- 6 From the boot prompt type `NM` then type one space and type the Subnet Mask address your IT Department provided for the unit. Press the enter key. For example, `NM 255.255.255.0` The WiNG-MGR will reboot after the Subnet Mask is changed.
- 7 From the boot prompt type `DG` then type one space and type the Default Gateway address your IT Department provided for the unit. Press the enter key. For example, `DG 192.168.103.1` The WiNG-MGR will reboot after the Default Gateway is changed.
- 8 The IP address is now set and the WiNG-MGR can be accessed through a Web browser using the new IP address.

2.5. Deploy Your Sensors

Once all wiring is complete and the WiNG-MGR is communicating on your network, you are ready to deploy your sensors. There are two different ways to configure sensors to communicate with a WiNG-MGR:

2.5.1 Use the Sensor Discovery Wizard

The sensor discovery wizard is the recommended method to use when associating sensors with a WiNG-MGR. It has a variety of benefits, including the ability to pick and choose which specific sensors are added to a particular WiNG-MGR installation. Since sensor discovery turns off automatically once the wizard is closed, using the wizard eliminates the possibility that sensor discovery will accidentally be left on once you have finished adding sensors to this install.

Complete instructions for using the sensor discovery wizard are found in section 3.1.3, “Sensor Discovery Wizard” on page 27.

2.5.2 Manually Launch Sensor Auto Discovery

You can also add sensors to a system if you manually toggle on and off sensor auto discovery. Sensor auto discovery differs from the sensor discovery wizard in a few ways. First and foremost, you have to manually turn sensor auto discovery on and off. Under normal operating conditions and by default, sensor auto discovery is turned OFF. If you do not turn off sensor auto discovery, the WiNG-MGR will continue to attempt to locate new sensors - this can contaminate your list of active sensors with sensors that do not actually exist. If you choose to use sensor auto discovery, make sure you toggle it off when you are done and click the Save Changes button to effect the change.

Sensor auto discovery does not allow you to choose which sensors are added to your system. It will automatically add all sensors transmitting within the WiNG-MGR’s range. This can be an inconvenience if you have multiple WiNG-MGRs operating in the same environment. If you use sensor auto discovery, you run the risk of displaying the same sensors on multiple managers.

Complete instructions for using the Sensor Auto Discovery are found in section 3.7.3, “Sensors” on page 58.

2.6. Set Notification Parameters For Your Sensors

WiNG sensors can be configured to trigger alarm and warning messages when their reading surpass set notification thresholds. Alarm and warning parameters can be set per individual sensor or across all sensors at once.

2.6.1 Global Sensor Settings

Global sensor settings are configured in a couple places in the user interface. Logged sensor data and battery alarm are set in the Admin screens - directions can be found in section 3.7.3, “Sensors” on page 58.

Global alarm and warning parameters can be set by following the directions in section 3.7.5, “Alarms” on page 62. If you choose to use this option, note that the settings will be applied

ONLY to the fields for which you check the checkboxes. They will be applied across all the sensors, and will overwrite any settings you have previously configured. Don't forget to click the Save Changes button to apply the setting across your system.

2.6.2 Individual Sensor Configuration

If you'd prefer not to use the global settings, you can configure your sensors one at a time. Use the directions found in section 3.2.1, "Individual Sensor Pages" on page 31 and configure the parameters sensor by sensor. Remember to click the Save Changes button on each page to apply the settings.

2.7. Sensor Mounting Tips

- ◆ The electronics in WiNG sensors are not waterproof. WiNG sensors need to be mounted in a safe location where they will not come into contact with water or condensation.
- ◆ Sensors can be secured with magnets (included), screws, zip ties, or on a 15mm DIN rail.
- ◆ Each sensor's serial number is unique, and you will need to refer to this number throughout the life span of the sensor. When you mount the sensor, ensure that the sensor's serial number is accessible.
- ◆ Although each sensor has a unique serial number, the WiNG-MGR will also assign each sensor an index number. This is listed as the ID # in the upper right corner of each sensor's individual configuration page. If you'd like, place a label or other marking on the sensor case to show its index number.

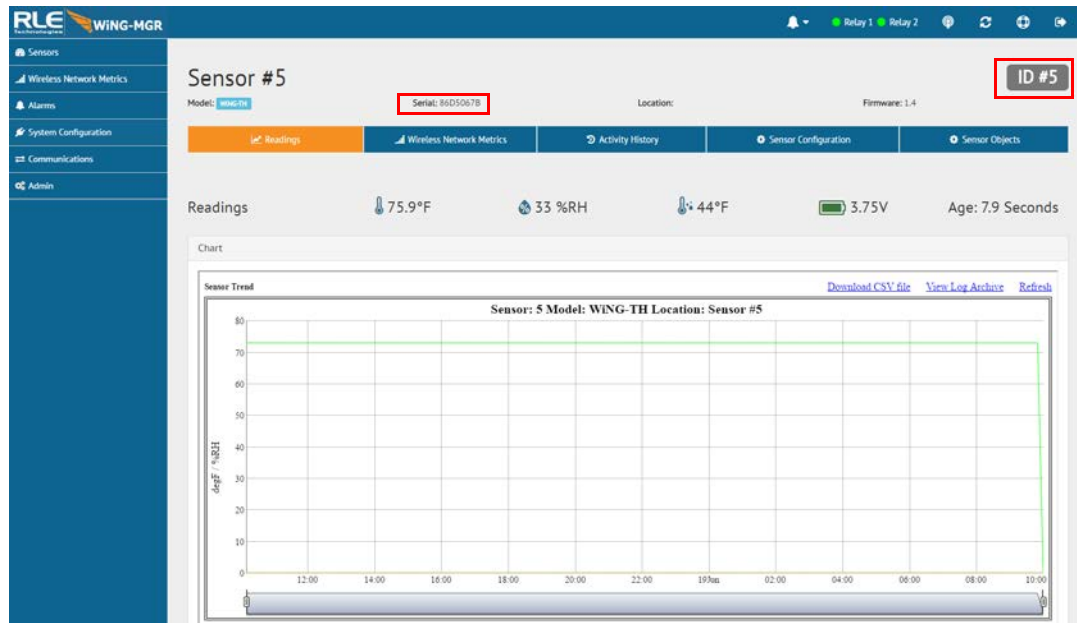


Figure 2.8 Sensor Serial Number and Index Number

WEB INTERFACE

Use the WiNG-MGR web interface to monitor and configure your WiNG network. To access the Web interface, you must first configure the WiNG-MGR to communicate via the Internet. To set the IP address, see section 2.4., “Communication: Set the IP Address” on page 21.

Use the Dashboard to access and view the data collected and managed by the WiNG-MGR.

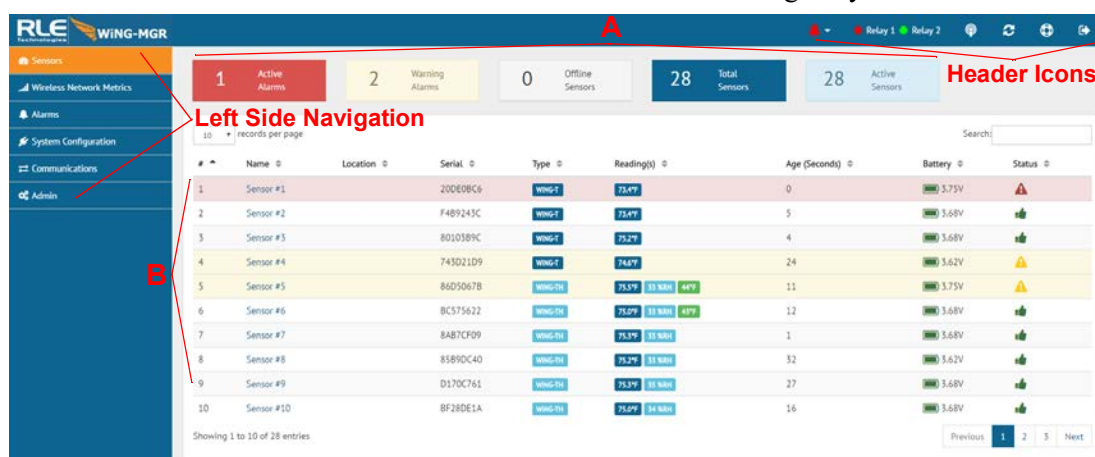


Figure 3.1 Dashboard Navigation

Option	Description
Header Icons	Detailed in “Header Icons” on page 27
Left Side Navigation	Left Side Navigation items each have their own documented section within this chapter.

Table 3.1 Dashboard Navigation Options

Option	Description
Section A	These blocks reflect the current status of the sensors connected to the WiNG-MGR.
Section B	<p>This is your view of the sensors associated with this WiNG-MGR.</p> <p>A drop down lets you choose how many sensors display per page. Select 10, 25, 50, or 100, depending on your preference.</p> <p>Use the Search field to display only the sensors whose data contains the term for which you are searching.</p> <p>The sensors name is a shortcut to that specific sensor's data and configuration information.</p> <p>When you look at the table of sensors in this section, note that each heading has a set of arrows next to it. These arrows allow you to sort the data in this table by that column, in either ascending or descending order. For instance, if you click on the arrows next to the Serial Number heading, the arrow pointing up gets much darker, and all the data in the table is sorted by the Serial Number field from lowest to highest. If you click that arrow again, the arrow pointing down gets much darker, and the data in the table is sorted by the Serial Number filled in ascending order, from highest to lowest.</p> <p>Page numbers also appear in the lower right side of this section. Click the appropriate number to move among the pages.</p>

Table 3.1 Dashboard Navigation Options

3.1. Header Icons

There are a series of icons on the upper right side of the dashboard. Use the icons to quickly access a variety of information and activities.

3.1.1 Alarm Bell

No matter where you are within the user interface, the alarm bell is a quick and easy way to know if you have any active alarms on your unit. It will be red if you have an active alarm, and will be white when there are no active alarms. It is also a shortcut to the Alarms Page, where you can dig deeper into any alarms on this WiNG-MGR.

3.1.2 Relay Output Status

Click on this link to access a modal window that provides a quick way to view the status of the WiNG-MGR's relay outputs. Click the X in the upper right corner of the box to close the modal window.

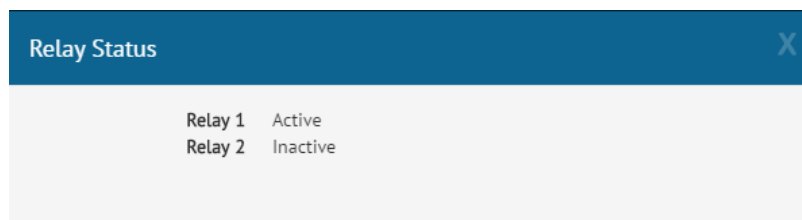


Figure 3.2 Relay Output Status

3.1.3 Sensor Discovery Wizard

The WiNG-MGR is equipped with a Sensor Discovery Wizard. Run the wizard when you need to install or locate new sensors. The wizard will discover available sensors and enter them into the Sensors page of the website.

- 1 Install all your sensors in the desired locations. Be sure to pull the tabs to activate the batteries in the sensors.
- 2 Click on the icon to launch the Sensor Discovery Wizard. Click the Begin Discovery button.

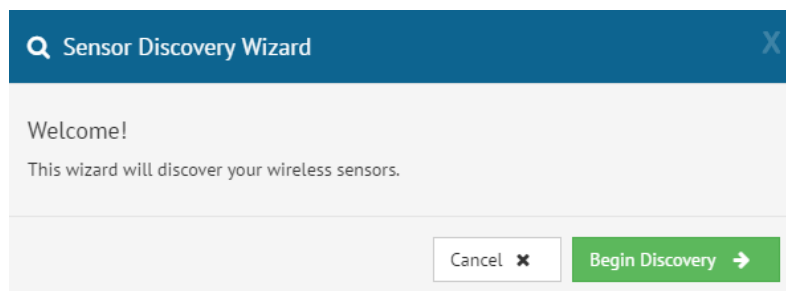


Figure 3.3 Sensor Discovery Wizard Modal

- 3 The wizard will locate all sensors within the range of the WiNG-MGR that are not already associated with this unit. They will all list in the modal window. Each sensor has a

checkbox in front of it. If you would like the sensor to be associated with this WiNG-MGR, leave the checkbox checked. Uncheck the boxes next to the sensors that should NOT be configured within this WiNG-MGR at this time. Verify the serial numbers of the sensors to ensure you're adding the correct sensors.

The animated ball image will continue as long as the modal window is open, so you don't have to wait for it to stop before you make your selections.

Once you've selected the appropriate sensors, click the Save Selected link.

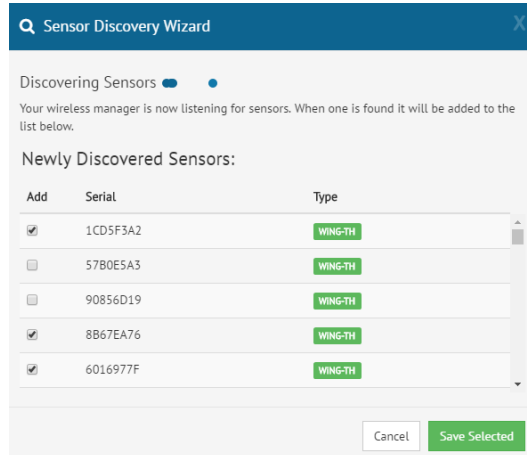


Figure 3.4 Sensor Discovery Wizard - Select the Sensors for This WiNG-MGR

- 4 Click the Close button to close the modal and return to the Sensors page of the website.

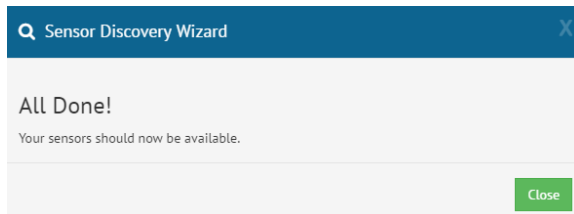


Figure 3.5 Close the Sensor Discovery Wizard

The selected sensors will be added to the system and will appear at the end of the list of sensors on the dashboard. Confirm the placement of all the new sensors in the sensor list.

From this point you have two options:

- a Use the sensor's serial number to locate it in the list and configure it per the instruction in "Individual Sensor Pages" on page 31. Be sure to click the Save Changes button on every page.
 - b Configure global alarm and warning settings for all the sensors, following the directions in "Alarms" on page 62.
- 5 Once you have configured all you alarm parameters, your sensor discovery is complete. Be sure to save a copy of the system configuration. Reference "Sensors" on page 58 to download the sensors CSV file for safekeeping.

3.1.4 Refresh

Click this icon to manually check for system and sensor status updates. The WiNG-MGR will refresh all its data and poll all connected devices for their most recent data. The Refresh link is especially helpful if the system's refresh rate is set at a long interval, or when new equipment is connected to the system. Instead of waiting for the WiNG-MGR to refresh on its own, click the link to force a system refresh.

3.1.5 Support Information

This pop up window displays a variety of information specific to your device in a singular location. Direct links to network and wireless metrics are also available from this modal. If you need to contact RLE's technical support team, you'll be asked for the information found on the support information modal window.

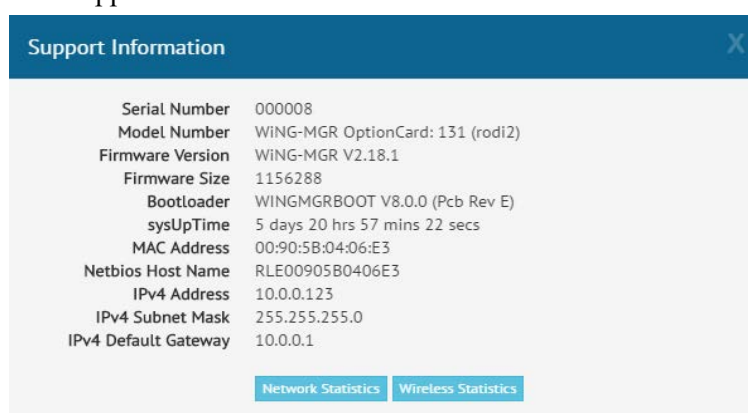


Figure 3.6 Support Information

3.1.6 Sign In/Out

Use this option to sign into and out of the WiNG-MGR user interface.

3.2. Sensors

The Sensors page allows users to view all the sensors accessible through the WiNG-MGR and also serves as the unit's dashboard view.

The drop down menu allows you to decide how many sensors will be displayed per page.

The search field allows you to display only the sensors that meet your specific search criteria.

The page displays a sensor number, the sensor's name - which is also a link to that sensor's individual configuration and data page, the sensor's location, the sensor's serial number, the sensor type (model description), current value reading, the age - the amount of time that's passed since the last reading was transmitted, battery life, and an icon that denotes the sensor's current status. Arrows next to each column heading allow the data to be sorted, in ascending or descending order, by that column.

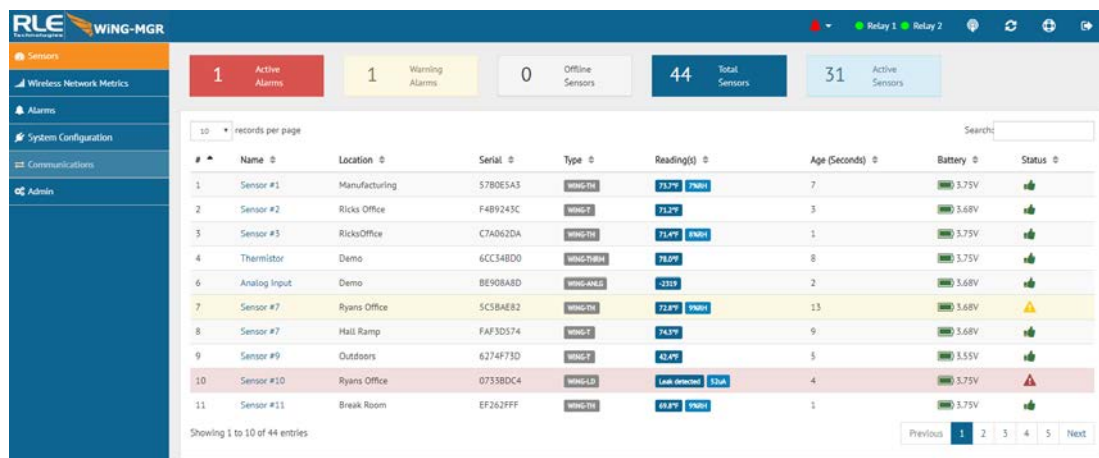


Figure 3.7 Sensors Page

Attribute	Description
#	The sensor's specific number. This number is uneditable, and is assigned by the WiNG-MGR.
Name	A unique name, configurable for each sensor. The sensor's name is a link. Click on the sensor's name to go to the that sensor's configuration and data page.
Location	A label used to note the sensor's physical location, or any other necessary descriptive information.
Type	The sensor's model and type.
Reading(s)	Displays the current sensor reading.
Age	Amount of time that has passed, in seconds, since the WiNG-MGR has received a broadcast signal from this sensor.
Battery	The amount of battery life left in the 3.6V AA Lithium battery in this sensor.
Status	An icon that tells, at a glance, the status of the sensor.

Table 3.2 Sensor Page Field Descriptions

3.2.1 Individual Sensor Pages

Whether you're viewing the sensors through the Sensor page or the Alarm page, each sensor's name is a clickable link. Click this link to access the sensor's individual data and configuration page.

All fields in the following table will not be available for each sensor. Only the configurable options that apply to each sensor are displayed in that sensor's configuration menu. Each individual sensor page has five tabs. Editable options are as follows:

3.2.1.1 Readings

This page tells you the current reading of the sensor and its battery life. There is a trend chart on this page and links that allow you to download the trended data and view the sensor's log archive. Sensor logging is configured in the Admin > Sensors menu and is detailed in section 3.7.3, "Sensors" on page 58.

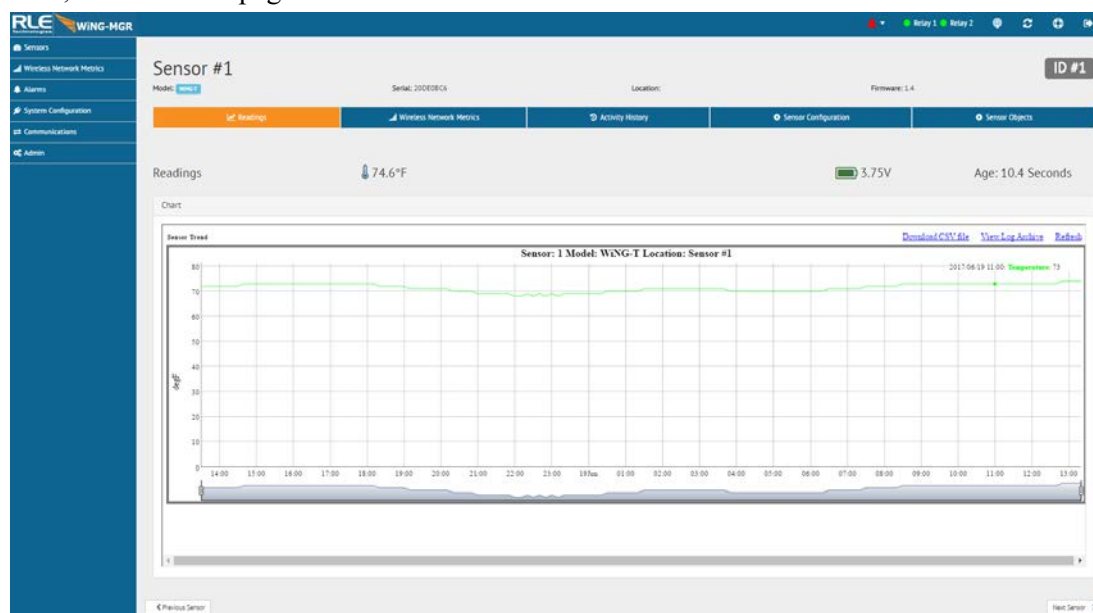


Figure 3.8 Individual Sensor Page - Readings Tab

3.2.1.2 Wireless Network Metrics

This page shows the wireless network metrics for this individual sensor. RSSI metrics for the manager and range extender system components can be found under the Wireless Network Metrics link in the left side navigation.

These sensor metrics are provided for advanced users with a strong knowledge of RF. You may also need to provide them to your technician if you engage in a technical support call.

Independently, the RSSI and LQI variables don’t provide much insight. But you can use them together, over time, to maximize the performance of your wireless network.

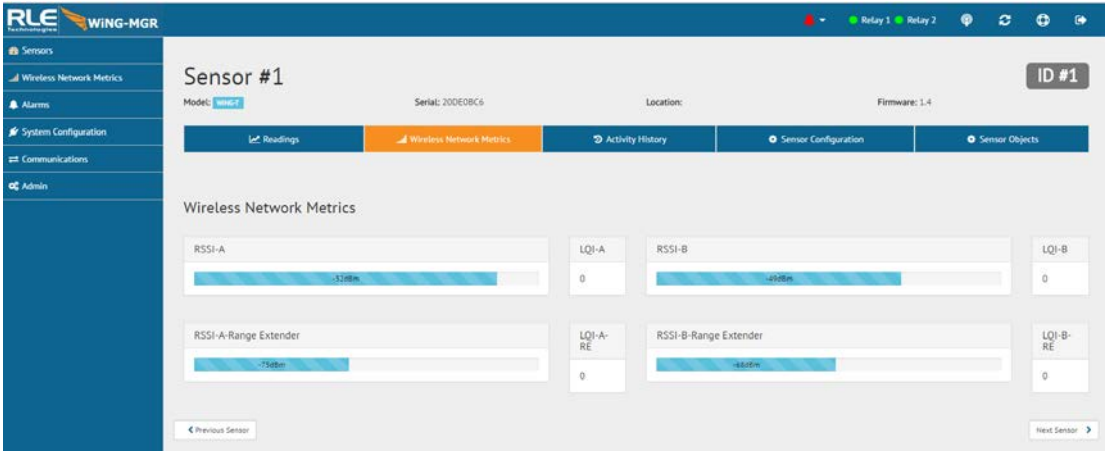


Figure 3.9 Individual Sensor Page - Wireless Network Metrics Tab

Attribute	Description
RSSI	<p>This is the Received Signal Strength Indicator. It represents the received power of the signal. This number will always be a negative value.</p> <p>To maximize the performance of this system, get the RSSI value as close to zero as you can. If you are working to maximize this WING system, the RSSI value will likely plateau close to -30. The closer you can get your reading to -30, the better performance you'll see.</p>
LQI	<p>This is the Link Quality Indicator. It is an indication of the level of noise that's disrupting the radio. This number will always be a positive value.</p> <p>To maximize the performance of this system, work to get this value as close to zero as possible. High LQI values - above 25 or 30 - indicate a noisy environment.</p>

Table 3.3 Wireless Network Metrics Field Descriptions

3.2.1.3 Activity History

This page shows the activity history for this sensor.



Figure 3.10 Individual Sensor Page - Activity History Tab

3.2.1.4 Sensor Configuration

Use this page to configure your sensor. All fields in the following table will not be available for each sensor. Only the configurable options that apply to each sensor are displayed in that sensor’s configuration menu.

If you wish to configure settings globally for your sensors, that option is available on the Admin > Alarms page and is detailed in section 3.7.5, “Alarms” on page 62.

NOTE When the desired edits have been made, click the **Save Changes** button to save the changes. If the **Save Changes** button is not selected, the new configuration will not be updated and saved.

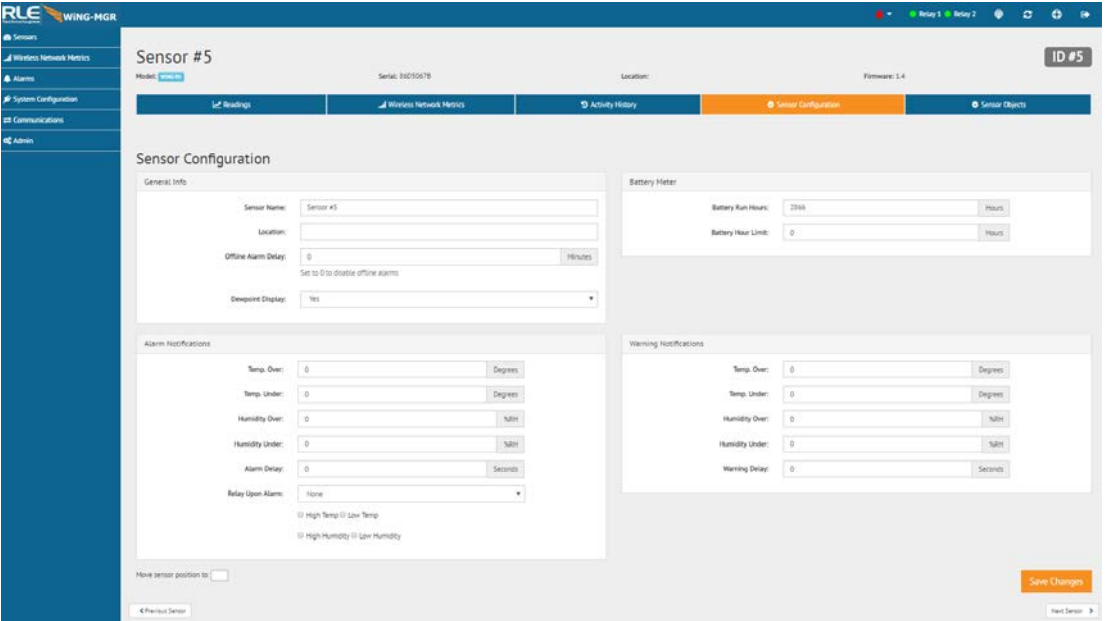


Figure 3.11 Individual Sensor Page - Sensor Configuration Tab

Option	Description
General Info	
Sensor Name	Enter a name for this sensor.
Thermistor Type	Use a 10k-2 thermistor with our WiNG-THRM sensor.
Location	Enter the sensor’s physical location.
Offline Alarm Delay	If the sensor goes offline, how much time should pass before an alert is generated? 0 = Offline alarms are disabled.
Dewpoint Display	If you have a temperature/humidity sensor, a calculated dew point can be displayed. Select Yes to activate this option.

Battery Meter - Allows you to manually track the amount of battery life left for this sensor. You must access the Admin > Sensors configuration page and select the “Run Hours” option from the Battery Meter Type dropdown if you wish to use this functionality.

Table 3.4 Individual Sensor Page - Sensor Configuration Tab Options

Option	Description
Battery Run Hours	Enter the number of hours the sensor has been running. Set this value to 0 each time you replace the battery if you are manually tracking battery life.
Battery Hour Limit	Designate the number of hours the battery on the sensor can run before a battery alarm notification is triggered.
Alarm Notifications	
Temp Over	Enter a high temperature alarm threshold - if the temperature rises above this value, a high temperature alarm is generated.
Temp Under	Enter a low temperature alarm threshold - if the temperature drops below this value, a low temperature alarm is generated.
Humidity Over	Enter a high humidity alarm threshold - if the humidity rises above this value, a high humidity alarm is generated.
Humidity Under	Enter a low humidity alarm threshold - if the humidity drops below this value, a low humidity alarm is generated.
Leak Threshold	<p>This number represents the uA of current that must be present on the leak detection sensing cable in order to trigger an alarm.</p> <p>If you are seeing a large number of false alarms, even after cleaning the cable, our tech support staff may work with you to adjust this threshold.</p> <p>Default = 4</p>
Alarm Delay	The number of seconds that pass between the time the system goes into alarm and the time that alarm is annunciated.
Relay Upon Alarm	<p>If the sensor goes into alarm, will it activate a relay? If so, designate which relay or relays it will activate, and check the appropriate boxes for which conditions the relay should be activated.</p> <p>Default = None</p>
Warning Notifications	
Temp Over	Enter a high temperature warning threshold - if the temperature rises above this value, a high temperature warning is generated.
Temp Under	Enter a low temperature warning threshold - if the temperature drops below this value, a low temperature warning is generated.
Humidity Over	Enter a high humidity warning threshold - if the humidity rises above this value, a high humidity warning is generated.
Humidity Under	Enter a low humidity warning threshold - if the humidity drops below this value, a low humidity warning is generated.
Warning Delay	The number of seconds that pass between the time the system goes into a warning state and the time that warning is annunciated.
Gain/Offset Settings - Applicable only for WiNG-ANLG analog sensors. Using the formulas below, adjust the gain and offset values appropriately to fine tune your sensor's accuracy.	

Table 3.4 Individual Sensor Page - Sensor Configuration Tab Options

Option	Description
Gain	<p>For 4-20mA sensors: Gain = (Sensor high range value – sensor low range value) ÷ 3085 <i>Example:</i> Temperature sensor with a sensing range of 5-120°F Gain = (120 - 5) ÷ 3085 = 0.0373</p> <p>For 0-5V and 0-10V sensors: Gain = (Sensor high range value – sensor low range value) ÷ 3856 <i>Example:</i> Temperature sensor with a sensing range of 5-120°F Gain = (120 - 5) ÷ 3856 = 0.0298</p>
Offset	<p>For 4-20mA sensors: Offset = Sensor low range – ((Sensor high range value – sensor low range value) ÷ 4) <i>Example:</i> Temperature sensor with a sensing range of 5-120°F Offset = 5 - ((120-5) ÷ 4) = -23.75</p> <p>For 0-5V and 0-10V sensors: Offset = Sensor low range <i>Example:</i> Temperature sensor with a sensing range of 5-120°F Offset = 5</p>
Footer Buttons - Remember to click the Submit Changes button for the sensor you're currently configuring before you move to another sensor's configuration page.	
<Previous Sensor	Configure the previous sensor in the list.
Next Sensor>	Configure the next sensor in the list.

Table 3.4 Individual Sensor Page - Sensor Configuration Tab Options

3.2.1.5 Sensor Objects

This page denotes the individual Modbus, BACnet, and SNMP objects provided for this particular sensor.

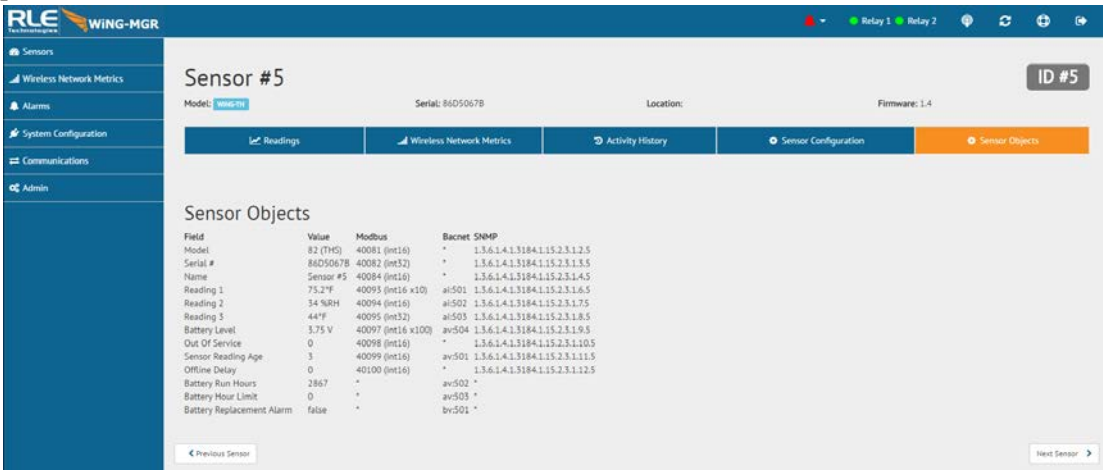


Figure 3.12 Individual Sensor Page - Sensor Objects Tab

3.3. Wireless Network Metrics

This page shows the wireless network metrics for your sensors. RSSI and LQI metrics for the system components can be found under the Wireless Network Metrics link in the left side navigation.

These metrics are provided for advanced users with a strong knowledge of RF. You may also need to provide them to your technician if you engage in a technical support call.

#	Name	Serial	Type	Rssi-A	Rssi-B	Rssi-RE-A	Rssi-RE-B	Age
1	Sensor #1	200E08C6	WING-T	-31dBm	-44dBm	-75dBm	-71dBm	0
2	Sensor #2	F489243C	WING-T	-29dBm	-43dBm	-62dBm	-60dBm	12
3	Sensor #3	80103B9C	WING-T	-74dBm	-75dBm	-87dBm	-74dBm	10
4	Sensor #4	743D21D9	WING-T	-44dBm	-87dBm	-68dBm	-64dBm	0
5	Sensor #5	86D5067B	WING-Tn	-76dBm	-81dBm	-75dBm	-75dBm	14
6	Sensor #6	BC575622	WING-Tn	-74dBm	-75dBm	-76dBm	-75dBm	8
7	Sensor #7	8AB7CF09	WING-Tn	-80dBm	-81dBm	-75dBm	-75dBm	2
8	Sensor #8	85B9DC40	WING-Tn	-67dBm	-80dBm	-75dBm	-71dBm	3
9	Sensor #9	D170C761	WING-Tn	-72dBm	-81dBm	-80dBm	-61dBm	9
10	Sensor #10	BF28DE1A	WING-Tn	-74dBm	-75dBm	-75dBm	-75dBm	5

Figure 3.13 Wireless Network Metrics Page

Attribute	Description
RSSI	<p>This is the Received Signal Strength Indicator. It represents the received power of the signal. This number will always be a negative value, and is provided for both channel pairs available for each sensor.</p> <p>To maximize the performance of this system, get the RSSI value as close to zero as you can. If you are working to maximize this WING system, the RSSI value will likely plateau close to -30. The closer you can get your reading to -30, the better performance you'll see.</p>

Table 3.5 Wireless Network Metrics Field Descriptions

3.4. Alarms

The Alarms page shows all active alarms and warnings reported by sensors monitored by this WiNG-MGR. If the sensors has returned to normal since the alarm or warning was reported, this will be noted in the table as well.

Each sensor’s name is a link. Click this link to visit the individual sensor’s status and configuration page. Here you can view the sensor’s logged data, as well as edit and configure the sensor’s settings and alarm and warning thresholds.



Figure 3.14 Alarms Page

3.5. System Configuration

Configure your WiNG-MGR through this series of menus.

NOTE If any of these fields are edited, be sure to click the **Save Changes** button to save the changes. If you edit the fields and do not click the **Save Changes** button, all edits will be lost.

3.5.1 Identity

The Identity page allows you to customize the name of the WiNG-MGR and the contact and location information for this particular WiNG-MGR. You can also look here to find the unit's serial number, model number, MAC address, and the version of firmware currently running on the unit.

The screenshot shows the 'System Configuration' page for 'RLE WiNG-MGR'. The 'Identity' tab is selected. The 'Identity Settings' section contains two columns of input fields. The left column has 'System Name' (RLE WiNG-MGR Unit 1), 'System Contact' (Rick Statzer), 'System Location' (RLE Corporate Offices), and 'Asset Tag' (42). The right column has 'Serial Number' (000008), 'Model Number' (WiNG-MGR OptionCard: 131 (rod2)), 'Firmware Version' (WiNG-MGR V2.18.1), and 'MAC Address' (00:90:58:04:06:E3). A 'Save Changes' button is located at the bottom right of the form.

Figure 3.15 Identity Page

Option	Description
System Name	Enter a name unique to this particular WiNG-MGR.
System Contact	Designate a technical contact for this unit.
System Location	Specify the physical location of this particular WiNG-MGR.
Asset Tag	If your facility uses asset tagging, log the code for this WiNG-MGR.

Table 3.6 Identity Configuration Options

3.5.2 IP

The WiNG-MGR can communicate via IPv4, IPv6, or both IPv4 and IPv6. Select the option that is most appropriate for your network, and configure the fields as necessary.

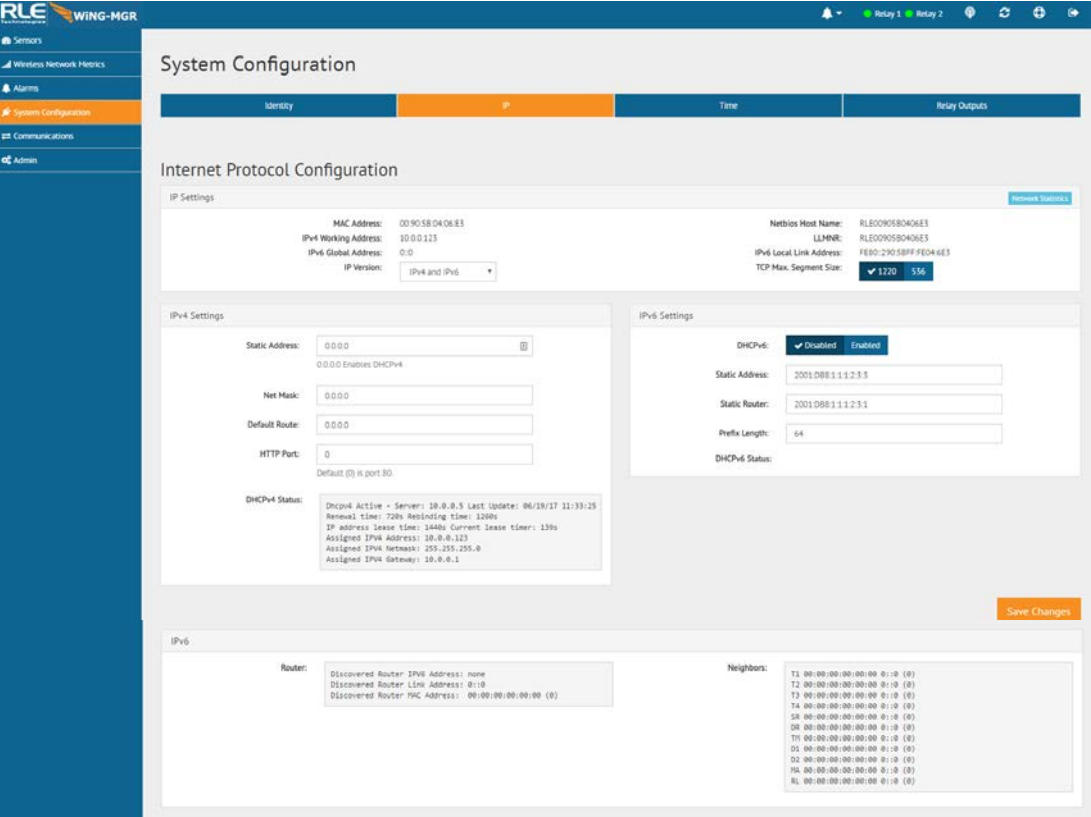


Figure 3.16 IP Page

Option	Description
IP Settings	
Network Statistics	Click this link to view advanced network statistics for this device.
IP Version	Designate whether the WiNG-MGR will communicate via IPv4, IPv6, or both.
TCP Max. Segment Size	The WiNG-MGR defaults to 1220 packet size for web page data. Users may select 536 for limited bandwidth or VPN applications. Default: 1220

IPv4 Settings- Configure these fields if the WiNG-MGR is communicating via IPv4.

Table 3.7 IP Configuration Options

Option	Description
Static Address	<p>The WiNG-MGR is shipped with a default IP address of 10.0.0.188. Contact your IT Department for an appropriate IP address, if you wish to change this field.</p> <p>If you would prefer to use DHCP, set this field to 0.0.0.0 to enable DHCPv4.</p> <p>Default IP address: 10.0.0.188</p>
Net Mask	<p>The WiNG-MGR is shipped with a default Subnet Mask of 255.255.255.0. Contact your IT Department for an appropriate Subnet Mask, if you wish to change this field.</p> <p>Default subnet mask: 255.255.255.0</p>
Default Route	<p>The WiNG-MGR is shipped with a default Gateway Route of 10.0.0.1. Contact your IT Department for an appropriate Default Gateway, if you wish to change this field.</p> <p>Default device route: 10.0.0.1</p>
Http Port	<p>Some ISPs use alternate http ports as an added security measure. Edit this field in accordance with your ISPs security settings.</p> <p>Default: 0 = Port 80</p>
IPv6 Settings- Configure these fields if the WiNG-MGR is communicating via IPv6. You do have the option in this section to use DHCP. If you do choose to enable DHCP, DHCP will override any static options you configure.	
DHCPv6	<p>Click the Enable button to enable DHCP for IPv6.</p> <p>Enabling IPv6 will override any static address information saved in the IPv6 fields.</p>
Static Address	If you choose not to use DHCP, Enter a static IPv6 address in this field.
Static Router	Enter static router information here.
Prefix Length	If the static address has a prefix, enter the bit length of the prefix here.

Table 3.7 IP Configuration Options

3.5.3 Time

The WiNG-MGR has an onboard clock that timestamps alarms and other logged events. If you'd like, you can set the onboard clock manually. If you configure the Network Time Protocol (NTP) settings, the NTP server will automatically adjust the time of the onboard clock and keep it in synch with the time reported by the NTP server. NTP maintains a high level of accuracy and reliability in time stamped events.

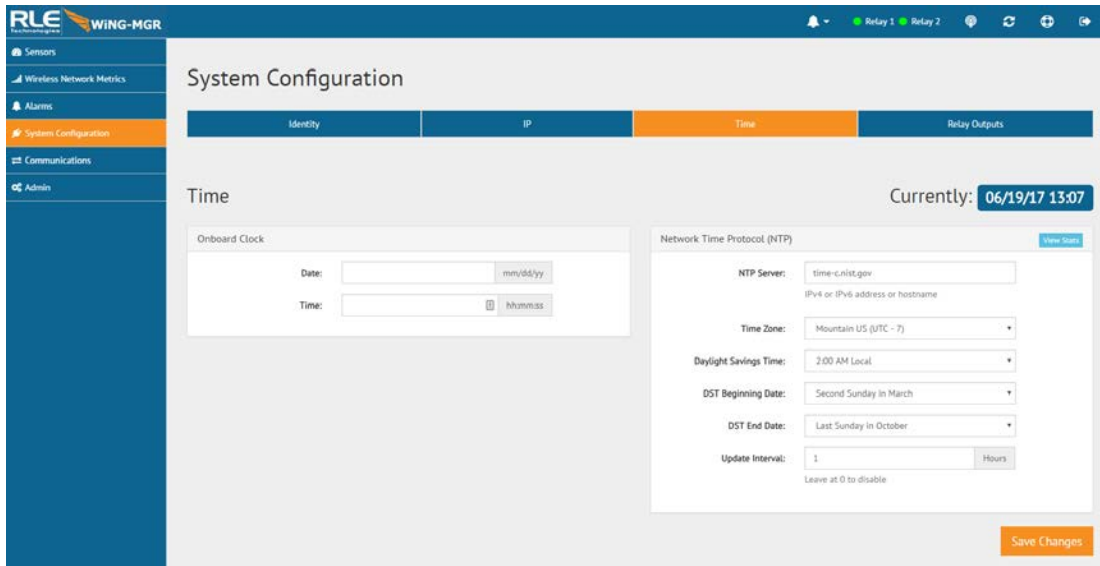


Figure 3.17 Time Configuration

Option	Description
Onboard Clock	
If you wish to set the onboard clock manually, do so here. Click the Save Changes button to save all modifications.	
Date	Enter the current date in mm/dd/yy format.
Time	Entered the current time in hh:mm:ss format. The clock is in 24 hour format - not 12 hour format - so ensure the hour is a two digit number between 01 and 24.
NTP	
If you configure NTP settings, they will override anything you have manually configured for the Onboard Clock.	
NTP Server	<div>The IP address or hostname of the NTP server with which your Wi-MGR will synchronize. Commonly used public NTP servers include us.pool.ntp.org and time.nist.gov</div> <div>Default setting: blank</div>
Time Zone	<div>Select the time zone in which this particular WiNG-MGR resides.</div> <div>Default setting: Western European (UTC + 0)</div>

Table 3.8 Time Configuration Options

Option	Description
Daylight Savings Time	<p>Enable or disable Daylight Savings Time, and designate at which time DST goes into effect in your time zone.</p> <p>Default setting: Disabled</p>
DST Beginning Date	<p>Set the day DST begins at your location.</p> <p>Default setting: Second Sunday - March</p>
DST End Date	<p>Set the day DST ends at your location.</p> <p>Default setting: First Sunday - November</p>
Update Interval	<p>This interval tells the WiNG-MGR how often it should access the NTP server you designated and synchronize its time with the NTP server. If you enter a 0 in this field it disables this feature, which also disables NTP.</p> <p>Default setting: 0 (disabled)</p>

Table 3.8 Time Configuration Options

3.5.4 Relay Outputs

The WiNG-MGR has two hard-wired relay outputs labeled K1 and K2. Use this tab to individually configure the relay outputs. Use the individual sensor pages to designate when a sensor alarm activates a relay output.

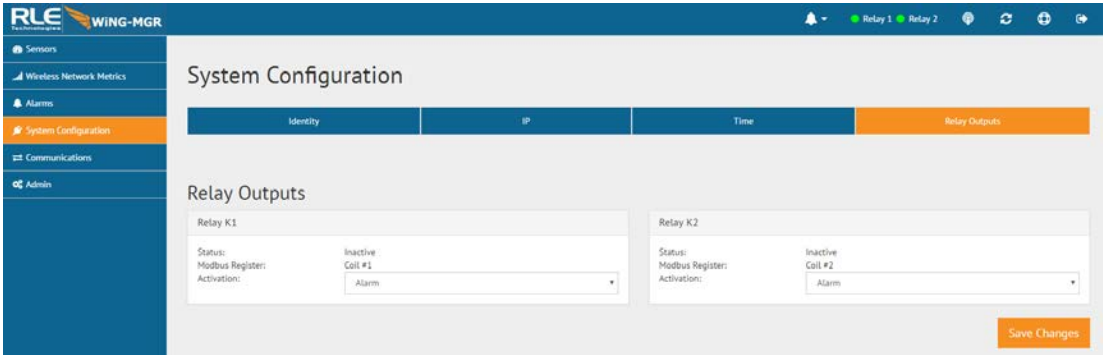


Figure 3.18 Relay Output Configuration

Option	Description
Activation	Each relay can be configured as an alarm relay, a latching alarm relay, or a Modbus only relay. When the relay is activated, an alarm can be triggered or the information can be conveyed via Modbus only. Default: Alarm

Table 3.9 Relay Output Configuration Options

3.6. Communications

The communications options allow you to configure how the WiNG-MGR conveys its information to individuals and other devices.

3.6.1 EIA-485

If the WiNG-MGR will communicate via the EIA-485 port, configure the necessary options here.

Figure 3.19 EIA-485 Configuration

Option	Description
Port Function	Select an output type for the EIA-485 port - either Modbus-Slave or BACnet-MSTP. Default: Modbus-Slave
Baud Rate	The baud rate is selectable: 1200, 2400, 9600, or 19200. Choose the appropriate baud rate. Default: 9600
Slave Address	Set a slave address, from 1-254. Set the slave address to 0 disable EIA-485 port communications. Default: 0 (disabled)

Table 3.10 EIA-485 Configuration Options

Option	Description
Parity	Selectable: None, Even, Odd Default: None
BACnet / MSTP Watchdog	If the WiNG-MGR loses BACnet communications, you can program the WiNG-MGR to automatically attempt to restore communications. The WiNG-MGR must detect a period of inactivity on the port before it can reset or reboot anything - this help avoid executing a reboot while someone is performing maintenance on or configuring a unit. Reset MSTP Port - The WiNG-MGR will reset the MSTP port once it detects no activity on the port for two minutes. System Reboot - The WiNG-MGR will reboot itself once it detects no activity on the MSTP port for fifteen minutes. Default: Disabled

Table 3.10 EIA-485 Configuration Options

3.6.2 Modbus

If you’re using Modbus RTU over an ethernet connection, you’ll need to designate a slave unit identifier. Configure that identifier here.

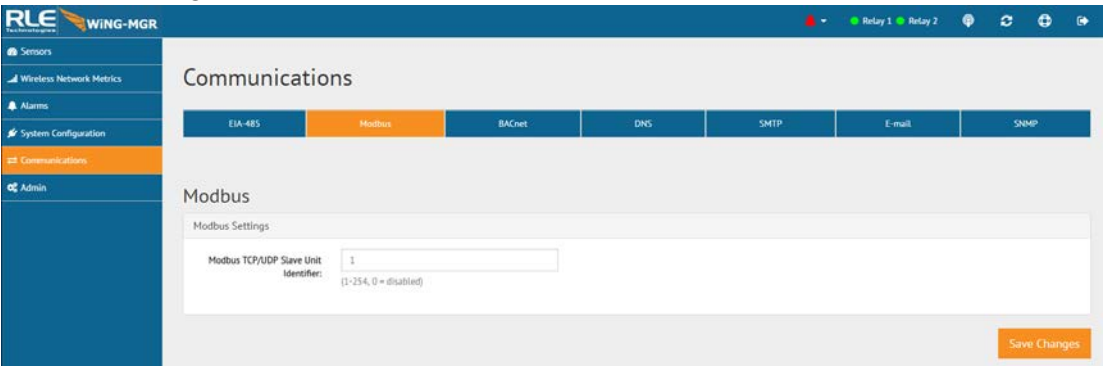


Figure 3.20 Modbus Configuration

Option	Description
Modbus TCP/UDP Slave Unit Identifier	<p>This designator is used for Modbus RTU over an Ethernet connection. The default slave unit identifier is 0, which disables this feature.</p> <p>To enable this option, enter a TCP/UDP slave address from 1-254 in this field. In most instances, the identifier is typically set at 1.</p> <p>Default: 0 (disabled)</p>

Table 3.11 Modbus Configuration Options

3.6.3 BACnet

If the WiNG-MGR will communicate via the BACnet, configure the necessary options here.

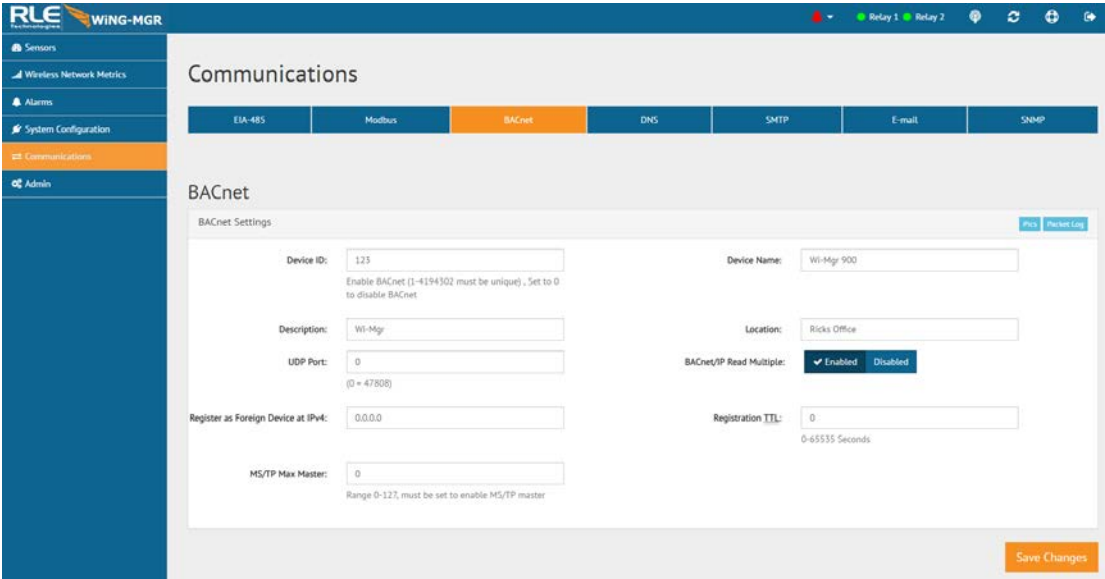


Figure 3.21 BACnet Configuration

Option	Description
Pics	Click this link to view the Bacnet identifiers and objects supported by the WiNG-MGR.
Packet Log	Click this link to view the Bacnet packet log.
Device ID	To enable BACnet, assign a unique number between 1 and 4194302 to identify this BACnet device on the network. If you enter a 0 in this field BACnet will be disabled. Default: 0 (Disabled)
Device Name	Assign a name - up to 38 characters - to the unit for BACnet discovery and integration.
Description	Add any additional details about the device, up to 38 characters.
Location	Designate the physical location of the unit.
UDP Port	Enter a 0 to specify port 47808 (0xBAC0) as the UDP port. If another port is specified by your application, enter that value here. Default: 0 (47808)
BACnet/IP Read Multiple	Use the toggle switch to enable or disable this option. Default: Enabled
Register as Foreign Device at IPv4	IP address of the master device with which you're trying to communicate. Requires a BBMD for foreign device discovery.

Table 3.12 BACnet Configuration Options

Option	Description
Registration TTL	Time, in seconds, for foreign device discovery.
MS/TP Max Master	The Max Master is the highest master address that a device will attempt to discover. Designate this device's Max Master here.

Table 3.12 BACnet Configuration Options

3.6.4 DNS

Configure DNS settings through this page.

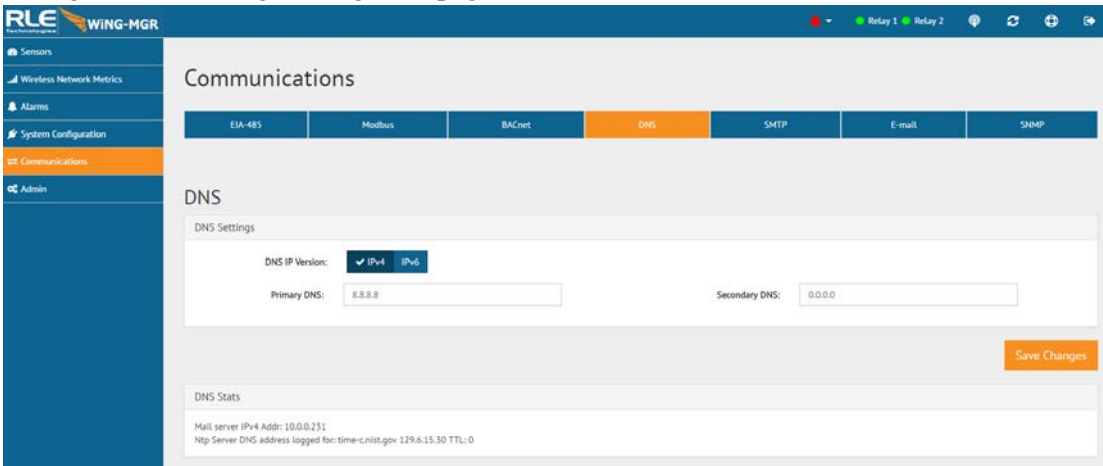


Figure 3.22 DNS Configuration

Option	Description
DNS IP Version	Use the toggle switch to designate whether you want to use an IPv4 or IPv6 DNS server. Default setting: IPv4
Primary DNS	Enter the IP address for the primary DNS server, as provided by your internet service provider. Default setting: 0.0.0.0
Secondary DNS	Enter the IP address for the secondary DNS server, as provided by your internet service provider. Default setting: 0.0.0.0

Table 3.13 DNS Configuration Options

3.6.5 SMTP

Configure SMTP settings through this page.

The screenshot shows the WiNG-MGR web interface. The left sidebar has a menu with 'Communications' highlighted. The main panel is titled 'Communications' and has several tabs: EIA-485, Modbus, BACnet, DNS, SMTP (active), E-mail, and SNMP. Under the SMTP tab, there's a 'SMTP Settings' section with input fields for 'Mail Server (SMTP)', 'Username', and 'SMTP Port'. The 'Authentication' dropdown is set to 'Plain'. A 'View SMTP Log' link is in the top right of the settings area. A 'Save Changes' button is in the bottom right. At the bottom, there's an 'Email Stats' section showing 'Emails Pending: 4' and 'Emails Sent: 0'.

Figure 3.23 SMTP Configuration

Option	Description
View SMTP Log	Click this link to view all logged email messages.
Mail Server (SMTP)	Enter the URL of your SMTP server.
Authentication	<p>This is the authentication type used by the server. Leave the authentication type at its default setting - None, unless otherwise directed by your IT department.</p> <p>Default setting: None</p>
Username	<p>This is the username for your email account. Leave the username at its default setting - blank, unless otherwise directed by your IT department.</p> <p>Default setting: Blank</p>
Password	<p>This is the password for that email account. Leave the password at its default setting - blank, unless otherwise directed by your IT department.</p> <p>Default setting: Blank</p>
SMTP Port	<p>Enter the appropriate SMTP port.</p> <p>Default setting: 0 = Port 25</p>
Email Stats	Refer to this field to see how many email messages are pending and how many have been sent by the WiNG-MGR. This is a quick way to check if email notifications are being sent by the WiNG-MGR.

Table 3.14 SMTP Configuration Options

3.6.6 E-mail

Configure e-mail settings through this page.

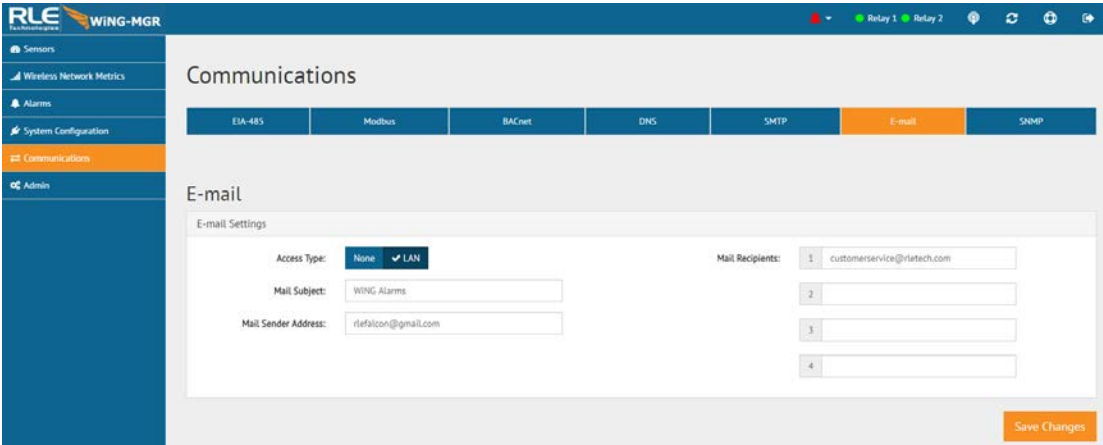


Figure 3.24 Email Configuration

Option	Description
Access Type	Select LAN to send alerts through a local network connection. Select None to disable the email feature. Default setting: LAN
Mail Recipients	Email alerts can be sent to four recipients. Enter up to four unique email addresses here. If you would like a message to be sent to a distribution group, you can use the email address of the distribution group in one of these fields.
Mail Subject	Enter the text that will appear in the subject line of any outgoing email messages.
Mail Sender Address	Any email messages sent by the WiNG-MGR will come from this valid email address.

Table 3.15 Email Configuration Options

Option	Description
Trap	Enter the appropriate community name.
Traps	
Trap Type	Select the SNMP version that best suits your needs: V1 - Trap, V2C - Trap, V2C - Inform, V3 - Trap, or V3 - Inform.
IP Version	Designate whether traps will be sent via IPv4 or IPv6.
Max. Inform Retries	If the communication of a trap fails, this is the maximum number of times the WiNG-MGR will re-send the trap.
Inform Interval	This is the amount of time that lapses between re-sends.
Trap Destinations	
Trap Enabled	Check the box to allow a trap to be sent to the device defined in this row.
IP Address	This is the IP address of the device that the trap will be sent to.
SNMPv3 EngineID	If this device uses SNMPv3, data will populate in this field.
SNMPv3	
User Name	Enter a unique name for each SNMPv3 user.
Access Mode	Choose from the following: No-Auth Auth-MD5, No-Priv Auth-MD5, Priv-DES A user name is needed for No Authentication, and a user name and password are required for Authentication and Privacy Authentication access.
Auth. Password (8-24 chars)	Enter the authentication password - the password must be between 8 and 24 characters long.
Priv. Password (8-24 chars)	Enter the privacy (encryption) password - the password must be between 8 and 24 characters long.

Table 3.16 SNMP Configuration Options

3.7. Admin

Administrator-exclusive options and capabilities are located in the Admin section.

3.7.1 XML/Logging

The WiNG-MGR collects quite a bit of data. Right click the *Download File* button on this page and select *Save Link As* or *Save Target As* to download this data as an XML file. You can then take that file and import it into a spreadsheet for viewing, logging, and analyzing.

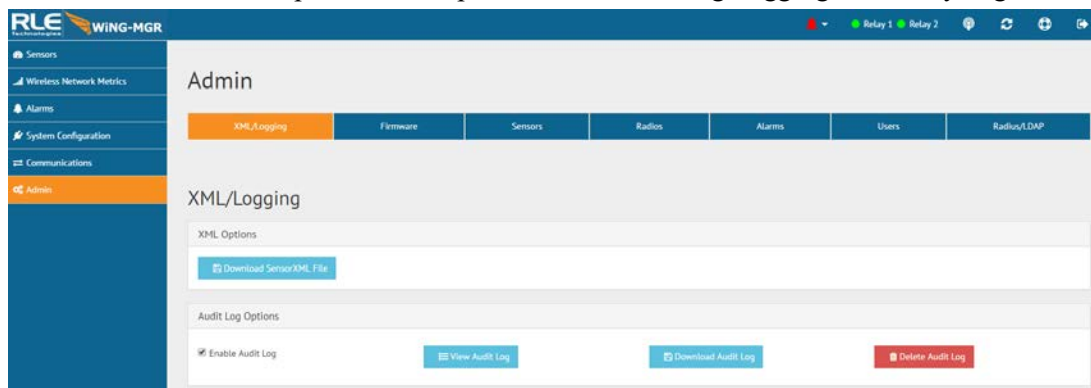


Figure 3.26 XML/Logging Page

Option	Description
XML Options	
Download Sensor XML File	Click this link to download sensor information as an .xml file.
Audit Log Options - The audit log is a log of all user interaction with the user interface. This log will hold 1,000 entries, wrapping in a first in, first out manner.	
Enable Audit Log	Click this checkbox to enable the audit log.
View Audit Log	Click this button to view the audit log.
Download Audit Log	Click this button to download the audit log.
Delete Audit Log	Click this button to delete all information from the audit log.

Table 3.17 XML/Logging Configuration Options

3.7.2 Firmware

RLE releases firmware upgrades that add new features and functionality to the WiNG-MGR. Firmware updates are free of charge. Download firmware updates from the RLE website and load them onto your system here.

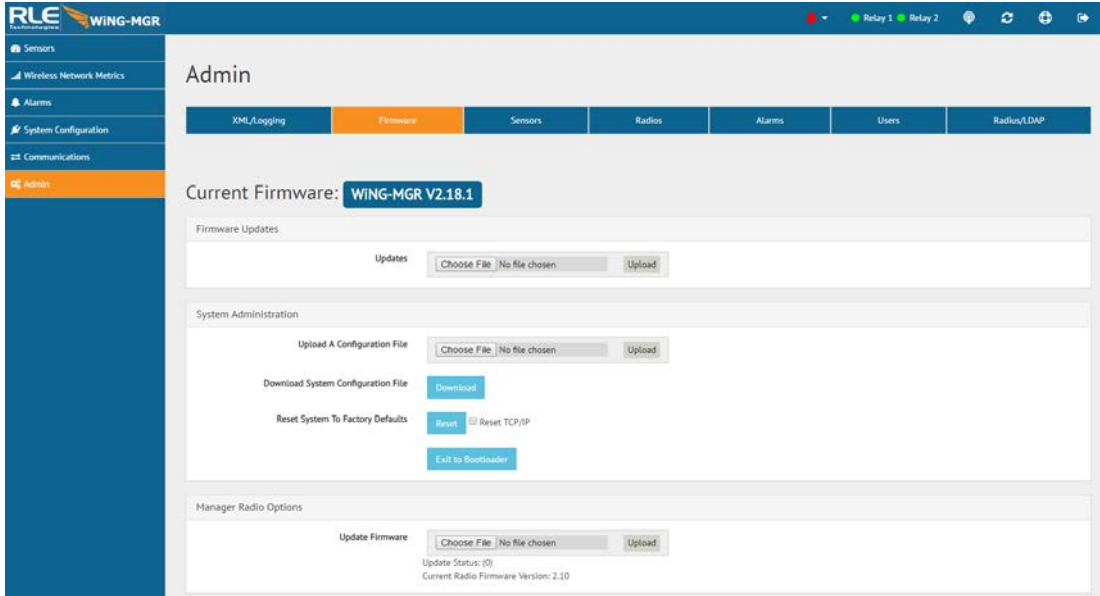


Figure 3.27 Firmware Page

Attribute	Description
Firmware Updates	
Update Firmware	Firmware updates are available, free of charge, on the RLE Technologies website. When new firmware is available for the WiNG-MGR, download the file from the website and upload the WiNG-MGR main firmware file here.
System Administration	
Upload A Configuration File	<p>Use this menu option to upload a system configuration file to the WiNG-MGR.</p> <p>This is a particularly useful option if you're configuring more than one WiNG-MGR and would like them to have the same settings, or if you've updated the firmware on your unit and need to re-upload your current system configuration file.</p>
Download System Configuration File	<p>If you are going to update the firmware on a WiNG-MGR, you should always download the configuration file first. This provides you with a backup of your current configuration, just in case something happens during the update process.</p> <p>If you're configuring more than one WiNG-MGR and would like them to have the same settings, you can configure one unit, download the configuration file, and then upload it to another WiNG-MGR.</p> <p>Use this button to download this unit's configuration file.</p>

Table 3.18 Firmware Configuration Options

Attribute	Description
Reset to Factory Defaults	<p>If you should need to restore your WiNG-MGR to its factory default settings, click this button.</p> <p>NOTE - Clicking the Reset Factory Default button will overwrite all system and sensor settings you have established within the WiNG-MGR, and will erase all logged data within the unit.</p>
Exit to Bootloader	<p>Click this link to access the WiNG-MGR's bootloader.</p> <p>This feature should be reserved for system updates and troubleshooting, and should only be accessed by individuals with the technical knowledge to use this feature.</p>
Manager Radio Options	
Update Firmware	<p>The WiNG-MGR requires multiple firmware files. When new firmware is available for the WiNG-MGR radio, download the file from the website and upload the WiNG-MGR radio file here.</p>

Table 3.18 Firmware Configuration Options

3.7.3 Sensors

There are some global configuration options that are applicable to all sensors in the system. Those options are configurable on the Sensors page. The Sensors page also holds the link for the Sensor Auto Discovery, which is used to add new sensors to the WiNG-MGR’s sensor network.

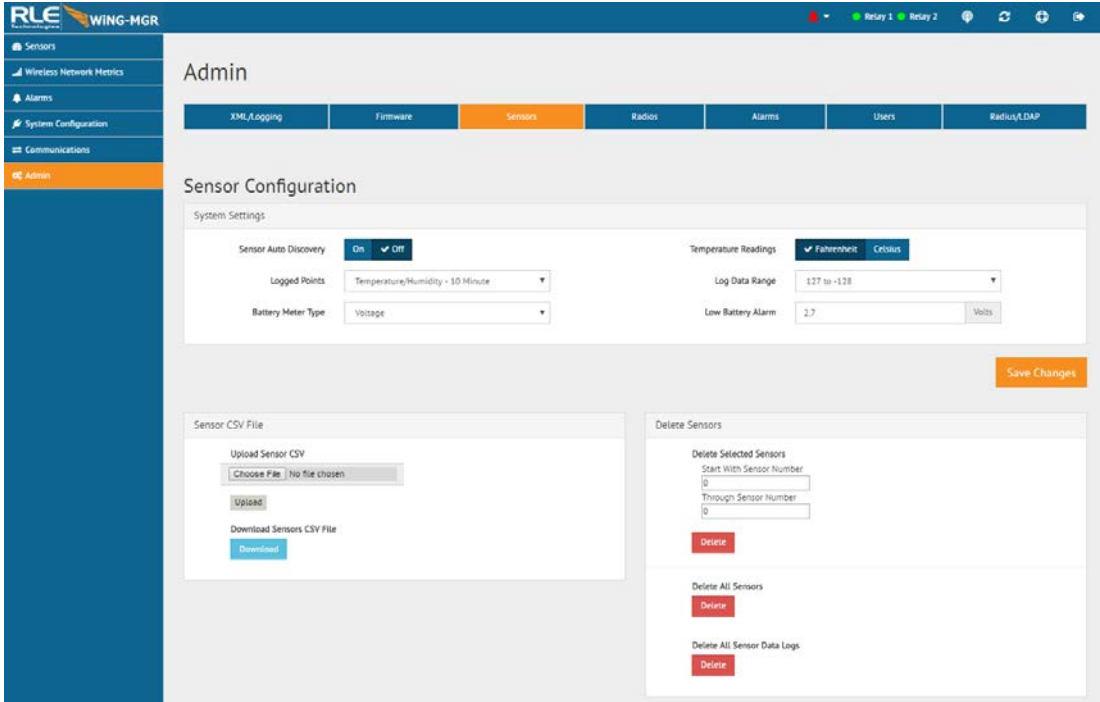


Figure 3.28 Sensors Page

Attribute	Description
System Settings	
Sensor Auto Discovery	<p>Click the toggle button to turn sensor auto discovery on. Click the Save Changes button to activate sensor auto discovery.</p> <p>Through sensor discovery, the WiNG-MGR discovers new sensors transmitting within its range. The WiNG-MGR loads the newly detected sensors the next available sensor position in the table on the Sensors tab of the web interface.</p> <p>Once you have located all your sensors, return to this page and turn sensor auto discovery off. If you do not turn off the sensor discovery feature, the WiNG-MGR will continue to try to find new sensors. This can contaminate your list of active sensors with additional sensors that do not actually exist.</p>
Temperature Readings	<p>Select whether temperature readings display in Fahrenheit or Celsius.</p> <p>Default: Fahrenheit</p>

Table 3.19 Sensor Configuration Options

Attribute	Description
Logged Points	<p>Temperature logging can be seen on each sensor's individual sensor page. Use this option to determine how frequently the sensors are sampled for graphing and logging purposes.</p> <p>Default: Temperature or Analog - 5 Minute</p>
Log Data Range	<p>The WiNG-MGR will log temperature readings that fall within a designated range. Readings that fall outside the range will be omitted. Select the range that best suits your application.</p> <p>Default: 127 to -128 degrees</p>
Battery Meter Type	<p>A battery meter can be displayed for each individual sensor. Use this dropdown menu to determine if the battery reading will be displayed, and if it will be displayed as voltage or run hours.</p> <p>Default: Voltage</p>
Low Battery Alarm	<p>If you're monitoring the battery voltage reading, you need to assign a voltage threshold for the low battery alarm. Assign that here.</p> <p>Default: 2.7 Volts</p>
Sensor CSV File	
Upload Sensor CSV	Upload a CSV file to configure sensors in mass on this unit. This feature is particularly helpful if you are configuring multiple identical WiNG-MGR systems simultaneously.
Download Sensor CSV File	Download a CSV file that shows all sensors configured in the Wi-MGR.
Delete Sensors	
Delete Sensor Range	If you wish to delete some sensors monitored by the WiNG-MGR without deleting all the sensors, use this option. Enter the range of sensors you wish to delete, and click the Delete button. If you wish to delete one specific sensor, enter that sensor's number as both the start and end points for the sensor range.
Delete All Sensors	This command erases all the information about the sensors the WiNG-MGR is currently monitoring. Users will have to reinstall sensor information after the button is clicked, or rediscover sensors already deployed.
Delete All Sensor Data Logs	Click this button to delete all logged data for all the sensors associated with this system.

Table 3.19 Sensor Configuration Options

3.7.4 Radios

Alternate communications channel pairs and radio communications can be edited on this page.

If you need to change the channel pair settings for your WiNG system, refer to Appendix C, “Alternate Channel Pair Communications” on page 83. While it’s not a difficult process, there are quite a few steps involved because you do need to make sure all the components of your system - the manager, sensors, and range extenders - are all operating on the correct channel pairs.

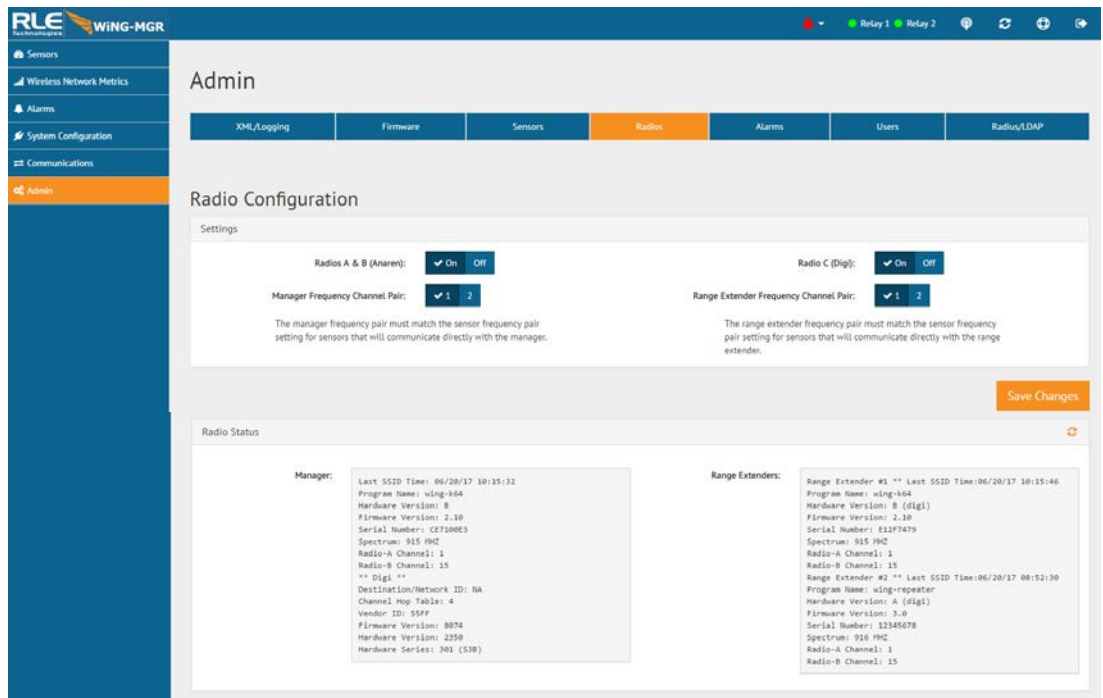


Figure 3.29 Radios Page

Attribute	Description
Settings	
Radios A & B (Anaren)	Radios A and B communicate with the WING sensors. Default: On
Radio C (Digi)	If your system uses a WiNG-RXT range extender, make sure radio C is on. Default: On
Manager Frequency Channel Pair	If you wish to change the channel pair on which your system is communicating, refer to Appendix C, “Alternate Channel Pair Communications” on page 83. Default: Channel pair 1

Table 3.20 Radio Configuration Options

Attribute	Description
Range Extender Frequency Channel Pair	<p>If you wish to change the channel pair on which your system is communicating, refer to Appendix C, “Alternate Channel Pair Communications” on page 83.</p> <p>Default: Channel pair 1</p>
<p>Radio Status - These fields provide detailed information about the status and operation of the WiNG-MGR's radios. The Spectrum field tells you if this unit operates on the 900MHz or 868MHz frequency. If you need to make a call to RLE tech support, they may request information found in these fields.</p>	

Table 3.20 Radio Configuration Options

3.7.5 Alarms

There are a set of global configuration settings that can be applied to all sensors associated with this WiNG-MGR. Any global settings configured on this page will apply to all the sensors associated with this WiNG-MGR. If you already have parameters set up for your sensors, they will be overwritten when you apply these global alarm settings.

Once you apply the global settings, that value will be present on each sensor’s individual configuration page. The global settings will not be recorded on this page - when you click to go to another page of the user interface and then return to this global settings page, all the values in the alarm fields will have reverted back to zeros.

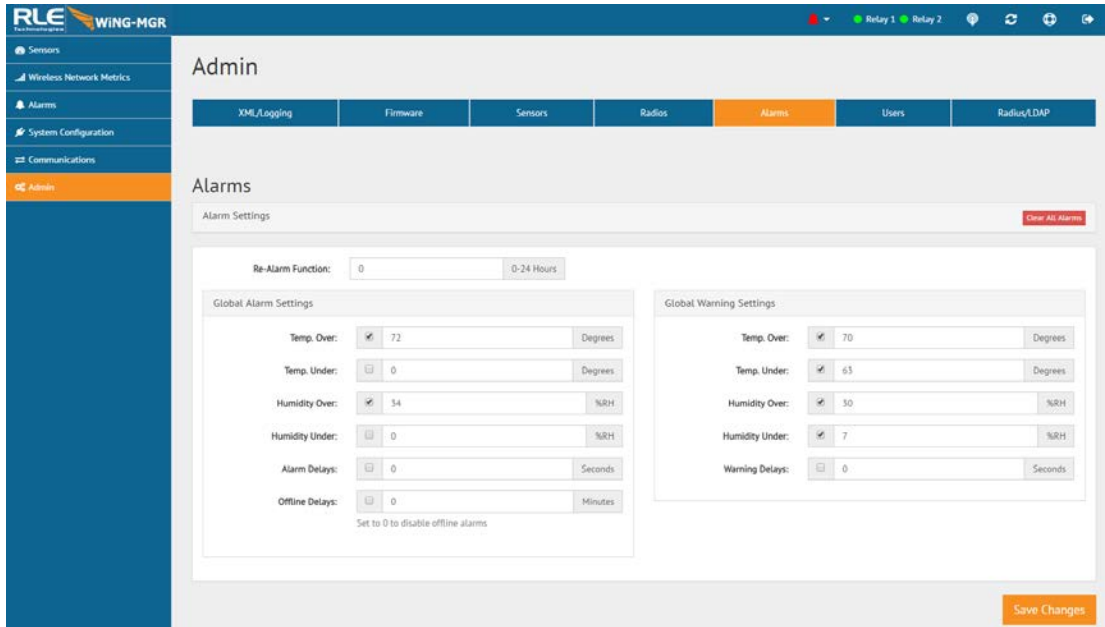


Figure 3.30 Alarms Page

Option	Description
Clear All Alarms	Click this button to clear all active alarms on this WiNG-MGR.
Re-Alarm Function	<p>The WiNG-MGR will re-send an alarm after a point has been in alarm for a certain number of hours.</p> <p>Select a re-alarm time from 1-24 hours. Set the re-alarm time to 0 to disable the feature.</p> <p>Default: 0 (disabled)</p>

Global Alarm Settings - There is a checkbox next to each individual alarm setting. Check this box to apply that particular setting to each sensor in the system. If you do not check the checkbox next to the alarm parameter, that value will not be applied to the sensors in your system.

Table 3.21 Alarms Configuration Options

Option	Description
Temp. Over	<p>Enter a high temperature alarm threshold - if the temperature rises above this value, a high temperature alarm is generated.</p> <p>Check the box to activate the option, and enter a temperature value.</p>
Temp. Under	<p>Enter a low temperature alarm threshold - if the temperature drops below this value, a low temperature alarm is generated.</p> <p>Check the box to activate the option, and enter a temperature value.</p>
Humidity Over	<p>Enter a high humidity alarm threshold - if the humidity rises above this value, a high humidity alarm is generated.</p> <p>Check the box to activate the option, and enter a humidity value.</p>
Humidity Under	<p>Enter a low humidity alarm threshold - if the humidity drops below this value, a low humidity alarm is generated.</p> <p>Check the box to activate the option, and enter a humidity value.</p>
Alarm Delays	<p>The number of seconds that pass between the time the system goes into alarm and the time that alarm is announced.</p> <p>Check the box to activate the option, and enter a time interval.</p>
Offline Delays	<p>Users can designate how many minutes must pass before the WiNG-MGR considers the sensor offline.</p> <p>Check the box to activate the option, and enter a time interval.</p>
Global Warning Settings - There is a checkbox next to each individual alarm setting. Check this box to apply that particular setting to each sensor in the system. If you do not check the checkbox next to the alarm parameter, that value will not be applied to the sensors in your system.	
Temp. Over	<p>Enter a high temperature warning threshold - if the temperature rises above this value, a high temperature warning is generated.</p> <p>Check the box to activate the option, and enter a temperature value.</p>
Temp. Under	<p>Enter a low temperature warning threshold - if the temperature drops below this value, a low temperature warning is generated.</p> <p>Check the box to activate the option, and enter a temperature value.</p>
Humidity Over	<p>Enter a high humidity warning threshold - if the humidity rises above this value, a high humidity warning is generated.</p> <p>Check the box to activate the option, and enter a humidity value.</p>

Table 3.21 Alarms Configuration Options

Option	Description
Humidity Under	Enter a low humidity warning threshold - if the humidity drops below this value, a low humidity warning is generated.
	Check the box to activate the option, and enter a humidity value.
Warning Delays	The number of seconds that pass between the time the system goes into a warning state and the time that warning is announced.
	Check the box to activate the option, and enter a time interval.

Table 3.21 Alarms Configuration Options

3.7.6 Users

The WiNG-MGR allows you to configure user privileges for up to eight unique users. User 1 is always the Administrator's slot. Use users 2 - 8 to either configure users with read only access, or to configure additional Admin accounts.

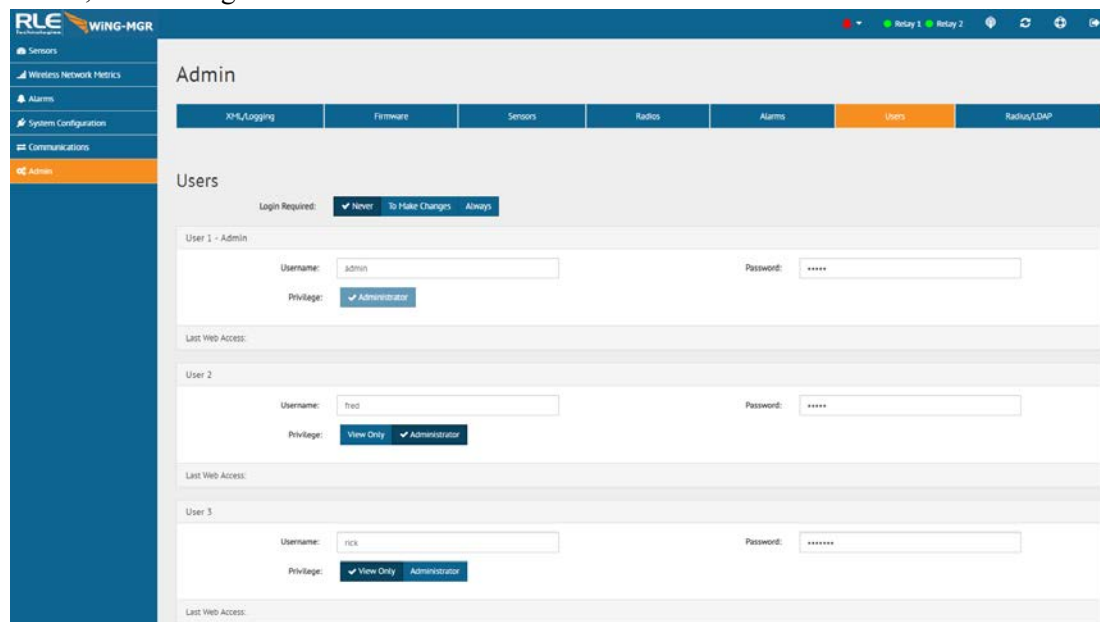


Figure 3.31 Users Page

Option	Description
Login Required	Designate when login is required on this WiNG-MGR: <ul style="list-style-type: none"> • Never - No one is ever required to log into the WiNG-MGR. Anyone can access the device and read all the data, and anyone can make changes to all the settings within the device. • To Make Changes - Users must be logged in to make changes within the WiNG-MGR. Anyone can access the device and read all the data, but you must be logged in to change any of the configuration and settings. • Always - All users must log in to gain access to the WiNG-MGR. You must be logged in to read or access any data within the WiNG-MGR, and you also must be logged in to make any changes within the WiNG-MGR.
User Configuration	
Username	Each user that will log into the WiNG-MGR needs their own unique username. Enter a username in this field.
Password	Assign a password for this username.
Privilege	Select which level of access this user will have: <ul style="list-style-type: none"> • View Only - This user can view pages within the web interface but cannot make any changes to settings or configuration. • Administrator - This user can view data and make changes to settings and configuration options.

Table 3.22 Users Configuration Options

3.7.7 Radius/LDAP

If you would like to configure Radius/LDAP settings for your WiNG-MGR, do so here.

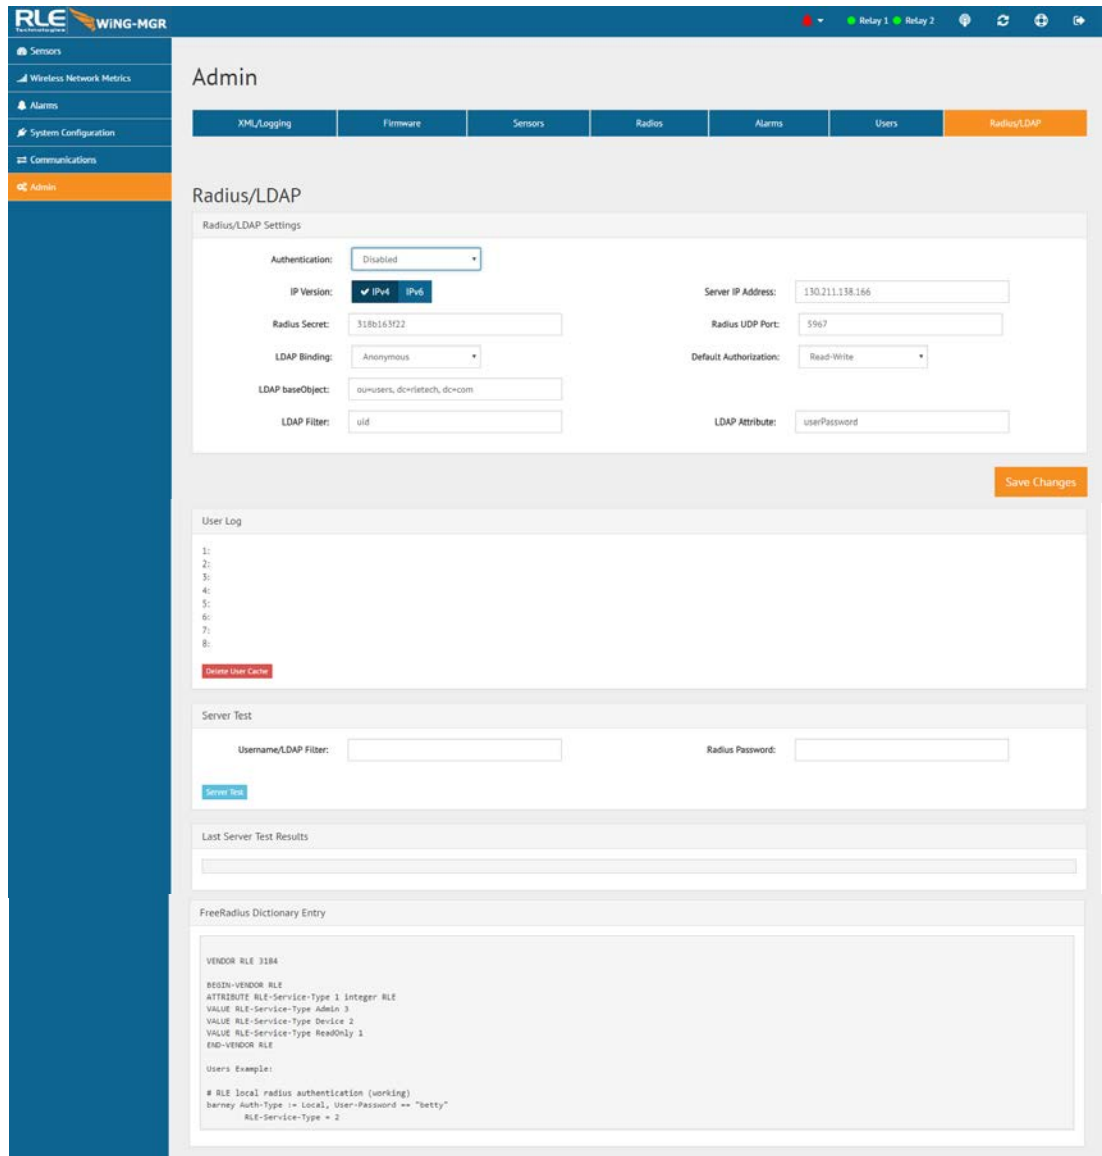


Figure 3.32 Radius/LDAP Page

Option	Description
Radius/LDAP Settings	
Authentication	Use the drop down menu to select either RADIUS or LDAP authentication.
IP Version	Designate the IP version for communications.
Server IP Address	Enter the IP address of the RADIUS or LDAP server.

Table 3.23 Radius/LDAP Configuration Options

Option	Description
Radius Secret	Enter the RADIUS secret. The secret is used between the RADIUS client and the RADIUS server to encrypt passwords. The secret is administered by the server and must be known to the client.
Radius UPD Port	Enter the correct RADIUS port.
LDAP Binding	Binding is locked as Anonymous. This field is uneditable.
Default Authorization	Designate whether LDAP users will have read only or read/write access.
LDAP baseObject	Enter the LDAP baseObject as defined by the LDAP server.
LDAP Filter	Enter an LDAP filter for the username. Default: uid
LDAP Attribute	Enter an LDAP attribute for the user password. Default: userPassword
User Log - The user log displays the last eight logins. Each user password is cached for one hour.	
Server Test - Click the button to test the usernames and passwords	
Username/LDAP Filter	Enter a username to test
Radius Password	Enter a password to test
Last Server Test Results - The results from the server and the authorization level will be displayed.	

Table 3.23 Radius/LDAP Configuration Options

MODBUS COMMUNICATIONS

4.1. Implementation Basics

The WiNG-MGR is capable of communicating via the half-duplex EIA-485 serial communication standard. The WiNG-MGR is configured to act as a slave device on a common network. The EIA-485 medium allows for multiple devices on a multi-drop network. The WiNG-MGR is a slave only device and will never initiate a communications sequence.

4.1.1 Modes of Transmission

The Modbus protocol uses ASCII and RTU modes of transmission. The WiNG-MGR supports only the RTU mode of transmission, with 8 data bits, no parity and one stop bit. Every Modbus packet consists of four fields:

- ◆ Slave Address Field
- ◆ Function Field
- ◆ Data Field
- ◆ Error Check Field (Checksum)

4.1.1.1 Slave Address Field

The slave address field is one byte in length and identifies the slave device involved in the transaction. A valid address range is between 1 and 254. The slave address is set from the **Com Port1/Modbus/Bacnet Configuration** web page.

4.1.1.2 Function Field

The function field is one byte in length and tells the WiNG-MGR which function to perform. The supported functions are 03 (Read 4xxxx output registers), 04 (Read 3xxxx input registers), 06 (Preset single register), 16 (Preset multiple registers).

4.1.1.3 Data Field

The data field of the request is a variable length depending on the function. The data fields for the WiNG-MGR are 16-bit registers, transmitted high order byte first (big-endian)

4.1.1.4 Error Check (Checksum) Field

The checksum field lets the receiving device determine if the packet has transmission errors. The WiNG-MGR's RTU mode uses a 16-bit cyclic redundancy check (CRC-16).

4.1.2 Exception Responses

If a Modbus master sends an invalid command to the WiNG-MGR or attempts to read an invalid register, an exception response is generated. The response packet will have the high order bit of the function code set to one. The data field of the exception response contains the exception error code.

Code	Name	Description
01	Illegal Function	The function code is not supported
02	Illegal Data Address	Attempt to access an invalid address
03	Illegal Data Value	Attempt to set a variable to an invalid value

Table 4.1 Exception Codes

4.2. Packet Communications for the WiNG-MGR

This section outlines the registers with the name and a brief description of each.

4.2.1 Function 03: Read Output Registers

To read the WiNG-MGR's parameter values, the master must send a Read Output Registers request packet.

The Read Output Registers request packet specifies a start register and the number of registers to read. The start register is numbered from zero (40001 = zero, 40002 = one, etc.).

Read Registers Request Packet	Read Registers Response Packet
Slave Address (1 byte)	Slave Address (1 byte)
03 (Function code) (1 byte)	03 (Function code) (1 byte)
Start Register (2 bytes)	Byte count (1 byte)
# of registers to read (2 bytes)	First register (2 bytes)
Crc Checksum (2 bytes)	Second register (2 bytes)
	...
	Crc Checksum (2 bytes)

Table 4.2 Read Output Registers Packet Structure

The register settings illustrated here are representative of only ONE sensor. Each sensor has a unique register ID that can be found on that sensor's Sensor Objects page ("Sensor Objects" on page 36).

Register	Name	Description	Units
40001	Id	Sensor Identification number	uint16
40002-40003	Serial Number	WiNG sensor serial number	uint32 (Hex-ASCII)
40004-40012	Sensor Name	Descriptive text sensor name	uint16 (Hex-ASCII)
40013	Converted Data #1	First data value converted by the WiNG-MGR	int12
40014	Converted Data #2	Second data value converted by the WiNG-MGR	int16
40015-40016	Converted Data #3	Third data value converted by the WiNG-MGR	int32
40017	Battery Level	Battery voltage (in centivolts) or percentage remaining	int16
40018	Service Status	Bits8-4 = unused; bit3 = alarm; bit2 = battery low; bit1 = offline	uint16 (Binary)
40019	Sensor Age	Time since last transmission received	uint16
40020	Offline Delay	Time till the sensor reads offline	uint16

Table 4.3 Read Output Registers

4.2.2 Function 06: Preset Single Register & Function 16: Preset Multiple Registers

To set the relay outputs over Modbus, first set the relay activation mode must be set to Modbus only. Do this in the web interface, at the bottom of the Digital IO Configuration page - Chapter 3, "Relay Outputs" on page 44. The master must then send a Preset Single or Preset Multiple Register request packet.

Register	Name	Description	Units	Range
49001	Relay K1	Relay 1 Activation: 1=active, 0=inactive	uint16	0-1
49002	Relay K2	Relay 2 Activation: 1=active, 0=inactive	uint16	0-1

Table 4.4 Preset Single and Multiple Registers

4.3. RTU Framing

The example below shows a typical Query/Response from a WiNG-MGR.

Slave Address	Function Code	Count Bytes of Data	Register Data Msb Lsb	Register Data Msb Lsb	Register Data Msb Lsb	CRC 16 "Lsb"	CRC 16 "Msb"
02	04	06	00 00	00 00	00 01	B5	A3

Table 4.5 Response Sample

Slave address 2 responds to Function Code 4 with six bytes of hexadecimal data and ends with CRC16 checksum.

Register Values:

40001 = 0000 (hex)

40002 = 0000 (hex)

40003 = 0001 (hex)

WiNG-RXT

5.1. Add A WiNG-RXT Range Extender To Your System

WiNG sensor and manager systems have an unprecedented transmission range: up to 100 feet through multiple walls, up to 270 feet through one wall, and up to 600 feet indoor, direct line of sight. While this range is more than ample for most situations, sometimes applications require signals to be pushed through more complex physical or noisy RF environments. The WiNG range extender is designed to provide the extra signal strength the WiNG system needs to thrive in these environments.

To add a WiNG-RXT to your application, connect the antennas (magnetic base antennas into ports A and B, and swivel antenna into port C) and apply power to the device. Ensure the most effective antenna placement - antennas A and B can be close together, but to avoid signal interference they need to be as far away from antenna C as your installation will allow. Extend the leader cables on the antennas to their fullest lengths and secure the antennas as far away from the WiNG-MGR - and has high off the ground - as possible. Access the WiNG-MGR's web interface and navigate to the Admin > Radio Configuration page. Radio C needs to be on in order for the WiNG-MGR to communicate with the WiNG-RXT.

The WiNG-RXT can communicate on alternate channel pairs in order to maximize the efficiency of the system. If you'd like to use an alternate channel configuration, refer to Appendix C, "Alternate Channel Pair Communications" on page 83.

5.2. Safety Precautions

The WiNG-RXT is not a grounded device. External circuits (USB port and power supply) are required to be double or reinforced insulated (Class II circuits).

The power to the WiNG-RXT must be supplied from a limited energy circuit: 5VDC with a maximum available current of 10A or a Class 2 circuit.



COMMUNICATIONS OBJECTS

The WiNG-MGR can communicate via Modbus, BACnet, and SNMP. Each sensor has its own Modbus Registers, BACnet Instances, and SNMP Object Identifiers (OIDs). This table is provided for reference. Please note that the values presented in Reading #2 and Reading #3 will vary depending on the type of sensor with which you are working.

The table presents specific communications objects for sensor 1. Looking at the table, we have **bolded** the numerical changes to help you see there is a pattern to the Register, Instance, and OID assignments and a direct connection between the sensor number and the communications objects.

A formula at the end of the table will help you calculate BACnet Instances and SNMP OIDs.

Sensor	Value	Modbus Register	BACnet Instance	SNMP OID
1	ID	40001 (int16)	n/a	1.3.6.1.4.1.3184.1.15.2.2.1.2.1
	Serial Number	40002 (uint32)	n/a	1.3.6.1.4.1.3184.1.15.2.2.1.3.1
	Name	40004 (int16)	n/a	1.3.6.1.4.1.3184.1.15.2.2.1.4.1
	Reading #1 Temp (deg x 10)	40013 (int16)	ai: 101	1.3.6.1.4.1.3184.1.15.2.2.1.6.1
	Reading #2 Humidity (%RH) or Digital Input	40014 (uint16)	ai: 102	1.3.6.1.4.1.3184.1.15.2.2.1.7.1
	Reading #3 Counter	40015 (uint32)	ai: 103	1.3.6.1.4.1.3184.1.15.2.2.1.8.1
	Battery Level	40017 (uint16)	av: 104	1.3.6.1.4.1.3184.1.15.2.2.1.9.1
	Service Status b8-b4 - not used b3 - Alarm b2 - Low battery b1 - Offline	40018 (uint16)	n/a	1.3.6.1.4.1.3184.1.15.2.2.1.10.1
	Age of Sensor Data (seconds)	40019 (int16)	av: 101	1.3.6.1.4.1.3184.1.15.2.2.1.11.1
	Offline Delay	40020 (uint16)	n/a	1.3.6.1.4.1.3184.1.15.2.2.1.12.1

Table A.1 Modbus Registers, BACnet Instances, and SNMP OIDs

- ◆ As you can see from the above table, each sensor occupies 20 modbus registers. Sensor 1 occupies registers 40001 - 40020, sensor 2 data occupies registers 40021 - 40040; sensor 3 data occupies registers 40041 - 40060, sensor 4 data occupies registers 40061 - 40080, etc. Use the range of your sensor's modbus registers and the table above to determine the register information for each of your sensors.
- ◆ BACnet Instances are as follows, where the **n** is replaced with the sensor's sensor number. If you were determining communications objects for sensor number **28**:
 - ai: **n01** = ai: **2801**
 - ai: **n02** = ai: **2802**
 - ai: **n03** = ai: **2803**
 - av: **n01** = av: **2801**
 - av: **n02** = av: **2802**
- ◆ SNMP Object Identifiers are as follows, where the last digit, **n**, is replaced with the sensor's sensor number

- 1.3.6.1.4.1.3184.1.15.2.2.1.2.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.2.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.3.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.3.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.4.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.4.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.6.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.6.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.7.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.7.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.8.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.8.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.9.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.9.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.10.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.10.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.11.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.11.**28**
- 1.3.6.1.4.1.3184.1.15.2.2.1.12.**n** = 1.3.6.1.4.1.3184.1.15.2.2.1.12.**28**

UPDATE FIRMWARE

Firmware updates are available on the RLE website at rletech.com. Locate the correct firmware and download it to an accessible location.

Before updating any firmware, go to the web interface and access the Admin menu, and then the Firmware tab. Download the WiNG-MGR's system configuration file and save it in a safe location.

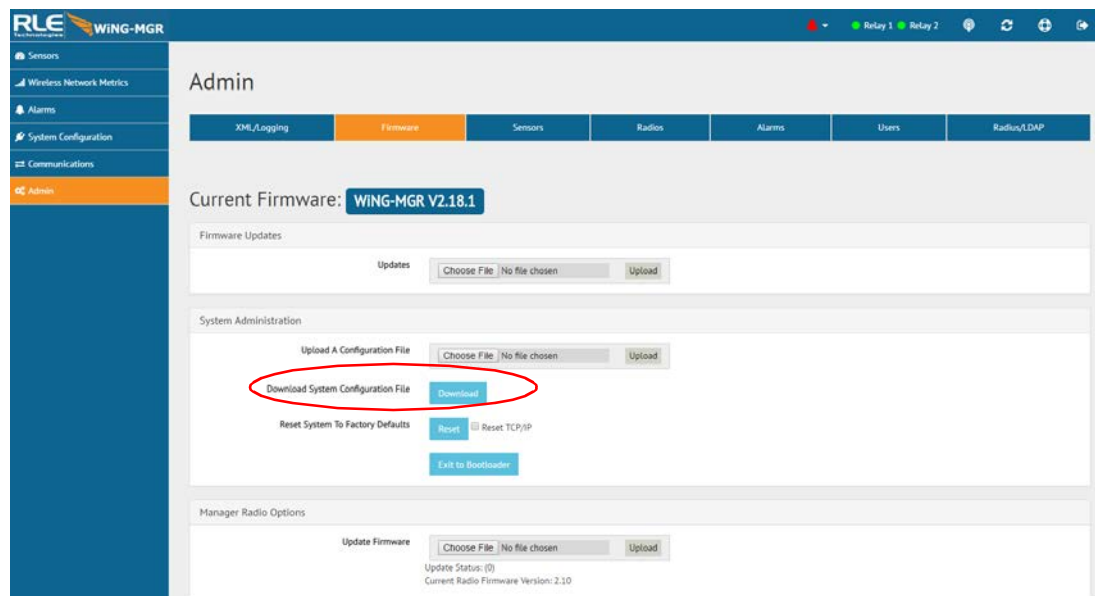


Figure B.1 Admin Menu, Firmware Tab - Configuration File Download

Once firmware is updated, the WiNG-MGR should return to its normal functionality. In very rare instances, the WiNG-MGR's configuration data - all the system configuration and sensor information loaded onto the unit - may become corrupted during the firmware update. If the configuration files do become corrupted, the downloaded configuration files serves as a backup, and can be uploaded to the system to restore the lost data. Use the MIME feature to upload the configuration file.

B.1. Load the Application Firmware

Once the WiNG-MGR's configuration file and the latest version of firmware files have been downloaded to a local drive, navigate to the Firmware tab within the Admin menu in the web interface.

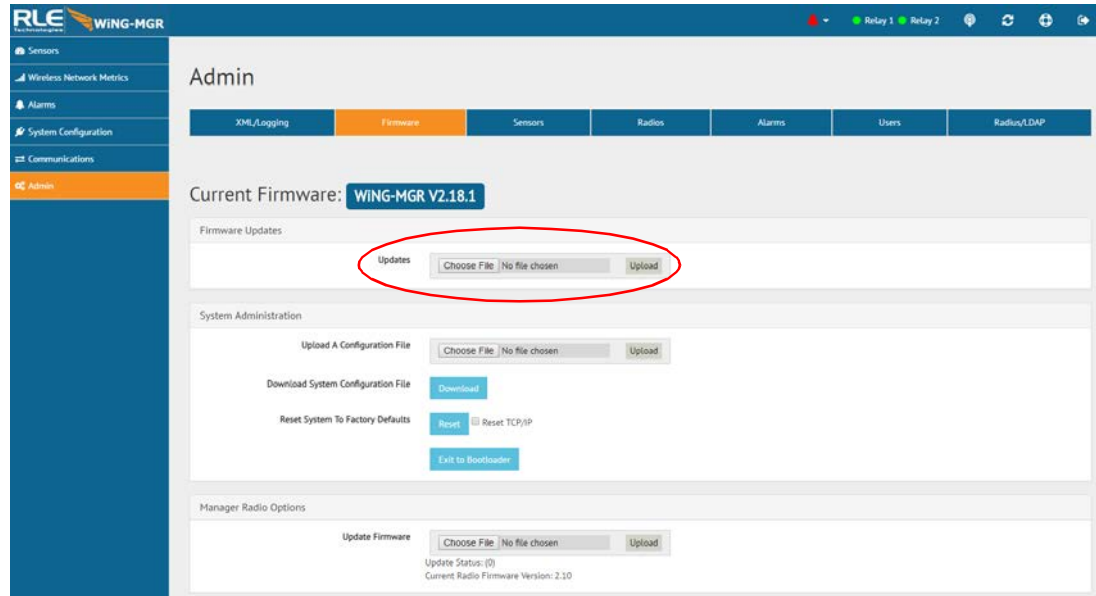


Figure B.2 Admin Menu, Firmware Page - Firmware File Upload

Navigate to the first file using the browse button, and then click on upload for the unit to take the file. This process takes about 60 seconds to complete.

B.2. Load the Firmware Using TFTP

You can also use TFTP to update the firmware file. Before updating the firmware through TFTP, the firmware flash application must be exited and then erased. To do this, navigate to the WiNG-MGR's configuration menu. Once here, click on the "Exit to Bootloader" button. Once exited, you will get a bootloader web page at the IP address of the unit. Next, click on the "Erase Flash" button. The Flash application will be erased.

Note To erase the flash, a special username and password are required. The username is **fds** (all lowercase), and the password is **rle2tech** (all lowercase).

1 Uploading firmware via TFTP requires a TFTP Client. It may be possible to download a free license TFTP Client from the internet. Consult your IT department to determine a compatible client program.

2 Verify that your PC and the WiNG-MGR are on the same subnet (LAN).

3 Open your TFTP client. Configure the client as follows.

a Host = WiNG-MGR's IP Address

b Port = 69

c Block Size = 64, 128, 256, 512, or 1024

Note The file must be sent in BINARY (not ASCII).

4 Send or PUT the first firmware file to the WiNG-MGR. It may take ~10 seconds for the firmware upload to begin. Do the same with the second firmware file.

5 After one minute, refresh the WiNG-MGR's web page. Notice that the Flash field now contains the latest firmware. Click the "Start Application" button to reboot the unit.



ALTERNATE CHANNEL PAIR COMMUNICATIONS

Most WiNG system deployments operate well with the out-of-the-box default settings. There are, however, instances where excess RF energy in a facility crowds the default channels. For this reason, the WiNG system was designed with a set of alternative communications channels. While it is not difficult to switch the channels on which your system is communicating, it is outside the basic WiNG configuration scope. For this reason, we are providing a specialized set of instructions and encourage you to contact our technical support staff if you have any problems configuring alternate channel communications.

C.1. WiNG Sensor Communications

By default, WiNG sensors communicate via channel pair 1. You can determine on which channel pair your sensor(s) are communicating by looking at the status LED on the front of the sensor enclosure. This LED blinks randomly once every 10 - 20 seconds. If the LED blinks blue, the sensor is communicating on channel pair 1. If the LED blinks green, the sensor is communicating on channel pair 2.

C.1.1 Change the Sensor's Channel Pair

- 1 Hold the sensor in your hand and locate the LED on the top of the enclosure. Make sure the LED on the board is blinking blue to indicate it's currently communicating via channel pair 1. Now look down the side of the enclosure past the LED (the left side of the enclosure) and find the small hole in the middle of the bottom left side of the enclosure - right where the lid meets the base. If you look inside this hole you will see a small black button. You will use this button to change the channel pair of this sensor.

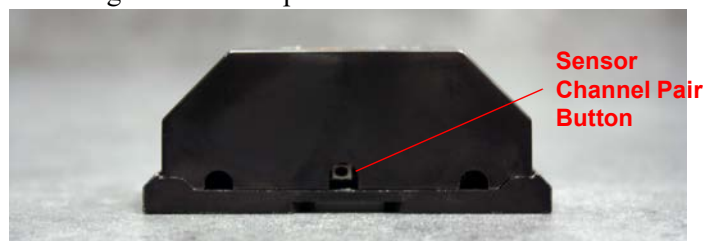


Figure C.1 Sensor Channel Pair Button

- 2 Insert a small non-conductive tool - like a toothpick - inside the hole and push the black button three times consecutively. The LED on the sensor board blinks blue with the first push, blue with the second push, and green with the third push. It will then blink green three times in a row to indicate the sensor has switched to channel pair 2 for its communications.
- 3 Pause a minute and watch the sensor LED. Once the transition pattern of blinks are complete, it blinks randomly, once every 10 - 20 seconds. Wait until it blinks green once to ensure channel pair 2 communications are active.
- 4 You can change the sensor back to channel 1 communications in the same way. If the sensor is operating on channel pair 2 (LED is blinking green), push the black button three times consecutively. The LED blinks green with the first push, green with the second push, and blue with the third push. Then it blinks blue three times in a row to indicate it's communicating on channel pair 1. Pause a minute to watch the LED and ensure it's blinking blue in its random blink cycle.
- 5 If you remove or change the sensor's battery, it will revert to the default channel pair 1 (blue blinking light).

C.2. Manager Communications

By default, the WiNG-MGR communicates via channel pair 1. If you change the channel pair on which your sensors are communicating, you also need to change the channel pair on which your manager is communicating.

The System LED on the front of the WiNG-MGR serves as an indicator in the same manners as LED on the front of the sensors. You can determine on which channel pair your WiNG-MGR is communicating by looking at the System LED on the front of the enclosure. This LED blinks randomly once every 10 - 20 seconds. If the LED blinks blue, the WiNG-MGR is communicating on channel pair 1. If the LED blinks green, the WiNG-MGR is communicating on channel pair 2.

You can also access the WiNG-MGR's web interface to determine on which channel pair the unit is communicating. Click the Admin link in the left navigation bar and then click the Radios link to access the Radio Configuration page. The channel pair number indicated by a check mark and darker shading in the Manager Frequency Channel Pair field is the active communication channel pair.

C.2.1 Change the Manager's Channel Pair

Access the WiNG-MGR's web interface. Click the Admin link in the left navigation bar and then click the Radios link to go to the Radio Configuration tab. Click the toggle button to select Manager Channel Frequency Pair 2. Click the Save Changes button to execute the channel pair change.

Once the changes have been saved, look at the LED on the front of the WiNG-MGR. It blinks green to indicate it is operating on channel pair 2.

If you should need to change the WiNG-MGR back to channel pair 1, return to this web page, click the toggle button to select channel pair 1, and click the Save Changes button. Then verify the WiNG-MGR is communicating on channel pair 1 by checking the System LED and ensuring it blinks blue.

C.3. Add a Range Extender to A WiNG System

While WiNG systems have more than an ample transmission range for most situations, sometimes applications require signals to be pushed through more complex physical or noisy RF environments. The WiNG-RXT range extender can be implemented in these situations to add up to 1,000 feet direct line of sight transmission distance per range extender to the application.

To add a WiNG-RXT to your application, connect the antennas (magnetic base antennas into ports A and B, and swivel antenna into port C) and apply power to the device. Ensure the most effective antenna placement - antennas A and B can be close together, but to avoid signal interference they need to be as far away from antenna C as your installation will allow. Extend the leader cables on the antennas to their fullest lengths and secure the antennas as far away from the WiNG-MGR - and as high off the ground - as possible.

Access the WiNG-MGR's web interface and navigate to the Admin > Radio Configuration page. Radio C needs to be on in order for the WiNG-MGR to communicate with the WiNG-RXT.

Just like WiNG-MGRs and WiNG sensors, the WiNG-RXT can communicate on different channel pairs. By default, it is set to communicate on channel pair 1. The System LED on the front of the unit indicates on which channel pair it is communicating. If it blinks blue, it's communicating on channel pair 1. If it blinks green, it's communicating on channel pair 2.

Most importantly, the WiNG-RXT needs to be communicating on the same channel pair as the sensors it is trying to pick up. If the sensors are on channel pair 1, the WiNG-RXT needs to be on channel pair 1. And likewise, if the sensors are on channel pair 2, the WiNG-RXT needs to be on channel pair 2 as well. You may have a specialized installation that has the WiNG-MGR on channel pair 1 picking up one set of sensors, and the associated WiNG-RXT is on channel pair 2 picking up an entirely different set of sensors. This too is fine. Just remember the sensors you're trying to pick up must be on the same channel pair at the device that should be receiving their signal.

D

TROUBLESHOOTING

Below you'll find troubleshooting tips for a variety of situations you may encounter with the WiNG-MGR. Please use these suggestions to troubleshoot your appliance.

If these troubleshooting tips do not resolve your issues, RLE Technologies offers personalized support for all our products. If you require customer support for your WiNG-MGR, please contact RLE Technologies directly:

- ◆ Email: support@rletech.com
- ◆ Phone: 800.518.1519

D.1. WiNG-MGR Troubleshooting

The WiNG-MGR will not power up.

- 1 Use a digital volt meter (DVM) to check for AC or DC input power on the lower left hand terminal block on the WiNG-MGR. If no voltage is present at terminal block, check the circuit breaker or power supply that powers the WiNG-MGR. If voltage is present at the power supply, continue to step 2.
- 2 Contact RLE Technologies for further troubleshooting.

You cannot view the WiNG-MGR's home page.

- 1 Verify that the WiNG-MGR is powered up and running. You will see lights on the RJ45 (Ethernet) port illuminated and flashing. If no lights are illuminated on the unit, the unit may not be powered. If lights are illuminated and flashing, continue to step 2.
- 2 Connect a computer to the WiNG-MGR via a serial cable and the console port. Once connected with a terminal emulation program running on the PC:
 - a Type `ip` and press enter. This displays the current IP address set to the WiNG-MGR. Verify it is the correct IP address.

- b** Type **nm** and press enter. This displays the Net Mask. Verify it is the correct Net Mask.
 - c** Type **dg** and press enter. This displays the Default Gateway. Verify it is the correct Default Gateway.
 - d** Correct any information that is wrong. If the information is correct, go to step 3.
- 3** With the serial cable connected and your terminal emulation program running, you can enter an address to have the WiNG-MGR ping to.
- a** Obtain a known good IP address.
 - b** In the terminal emulation program, type **ping <one space> ip address** and then press enter. *Example: ping 192.168.1.1*
 - c** If a ping response is not established, contact your IT department and make sure the patch cord your using is not faulty. Have the network switch port checked to make sure it is activated.
 - d** If a ping response is established, contact your local sales representative or RLE Technologies.

Sensors do not automatically display on the WiNG-MGR's home page.

By default, the WiNG-MGR is shipped with the sensor discovery feature turned OFF. In order for the discovery to work, click the Sensor Discovery icon in the web page header. Follow the directions as outlined in “Sensor Discovery Wizard” on page 27.

If the Sensor Discovery Wizard has run sensors still do not appear, work your way through the following steps:

- 1** If the sensor is not visible on the WiNG-MGR's home page, look at the top of the sensor and see if the LED is blinking. If you do not see a blink, check the sensor's batteries. If you do see it blink, continue to step 2.
- 2** Verify the sensor's serial number. Make sure you're looking for the correct sensor at that location.
- 3** The transmission range of a WiNG sensor depends on the distance between the sensor and the WiNG-MGR, and the number of obstacles between the two. The more obstructions between the devices, the weaker the signal becomes. Do not install a sensor inside a solid metal cabinet. This can interfere with its transmission.
- 4** Bring the sensor closer to the WiNG-MGR. Run the sensor discovery wizard again. If the sensor does not show in the wizard when it is close to the WiNG-MGR, contact your local sales representative or RLE Technologies. If the sensor does show in the wizard, move the sensor back to its original location.
- 5** Sensors have may loose signal quality or see a decrease in range due to distance or physical obstructions. If moving the sensor to its original location causes the signal to be lost again, your best option is to move the sensor to another acceptable location, where it can be “seen” by the WiNG-MGR, or to purchase a range extender (WiNG-RXT) and add it to your system.

D.2. Sensor Troubleshooting

The WiNG-MGR is designed to work with a RLE Technologies' WiNG sensors. Sometimes, problems may occur with the sensors that affect the way they interact with the WiNG-MGR. Use the following guidelines to troubleshoot WiNG sensors.

The sensor does not seem to be working. It may have a battery problem.

Check the battery's voltage if the sensor begins to show inconsistent or unreliable results. As battery power degrades, the sensor may report data outside the bounds of reasonable readings. If this occurs, replace the battery.

When you replace the battery, replace it with a 3.6V lithium battery, NOT a standard alkaline AA cell. Also make sure you replace it with the terminals facing the correct direction. The sensor will not function with an alkaline cell or if the battery is inserted backwards.



TECHNICAL SPECIFICATIONS

WiNG-MGR

Power		
	Voltage Rating	24VAC, 50/60Hz; 24VDC, 600mA
	Current Rating	600mA max
Wired Relay Outputs		Two (2) Dry Contact, Form C, 1A @ 24VDC resistive, 0.5A @ 120VAC
Communications Ports		
	Ethernet	10/100 BASE-T, RJ-45 connector; 500VAC RMS isolation
	RS-232	DB9 female connector; 9600 baud; No parity, 8 data bits, 1 stop bit
	RS-485	1200, 2400, 9600 or 19200 baud (selectable); Parity: none, even or odd, 8 data bits, 1 stop bit
Protocols		
	TCP/IP, HTML, TFTP, SNMP	V1: V2C MIB-2 compliant; NMS Manageable with Get
	Modbus (EIA-485)	Modbus Slave; RTU mode; Supports function codes 03
	Modbus TCP/IP UDP/IP	Modbus Slave; TCP/IP transmission protocol
	BACnet/IP	ASHRAE STD 135-2004 Annex J
	BACnet MS/TP	RS-485
Wireless Communications		
	Frequency Range	868-870MHz / 902-928MHz
	Max Number of Wireless Sensors Per Manager	RLE recommends not exceeding 250 sensors per WiNG-MGR; 400 sensors per WiNG-MGR may be accomplished with range extenders, but signal conflict will increase.
	Antenna	Three (3) 868-928MHz with RP/SMA connectors
Web Interface Login Security		Eight (8) users and passwords can be configured
Indicators		

Table E.1 WiNG-MGR Technical Specifications

	RX A	1 green LED
	RX B	1 green LED
	TX/RX C	1 green LED
	Diagnostics	1 green LED
	System	1 multicolor LED
	RO1 RO2	1 green LED per relay output
	RS485 Network Status	1 green LED for transmit, 1 Green LED for receive
	RJ45 Network Status	2 green LEDs
	Device Status	1 multicolor LED
Operating Environment		
	Temperature	32°F to 122°F (0°C to 50°C)
	Humidity	5% to 95% RH non-condensing
	Altitude	15,000ft (4572m) max. 9,842ft (3000m) max. if applying more than 150V, 50/60Hz to the relays from overvoltage category II circuit.
	Storage Temperature	–4°F to 185°F (–20°C to 85°C)
	Mounting	19" Rack Mount or Wall Mount
	Dimensions	9.7"W x 4.8"D x 1.8"H (24.6cmW x 12.2cmD x 4.6cmH)
	Weight	2.7lb (1.23kg)
	Certifications	ETL listed; CE; conforms to UL 61010-1, EN 61010; certified to CSA C22.2 NO, 61010.1; RoHS compliant; FCC ID X7J-A11072401 and MCQ-XB900HP; IC 8975A-A11072401 and 1846A-XB900HP

Table E.1 WiNG-MGR Technical Specifications (continued)

WiNG-RXT

Power	5VDC @ 400mA max.
USB Communications Port	Serial port emulation for firmware upgrades and diagnostics
Range	Up to 1,000 ft (305m) indoors, direct line of sight to WiNG-MGR or another WiNG-RXT. Up to 600 ft (183m) direct line of sight to WiNG sensors. Up to 270 ft (82.3m) through one wall to WiNG sensors. Up to 100 ft (30.5m) through multiple walls to WiNG sensors.
Indicators	

Table E.2 WiNG-RXT Technical Specifications

	RX A	1 green LED
	RX B	1 green LED
	TX/RX C	1 green LED
	Diagnostics	1 green LED
	System	1 multicolor LED
Operating Environment		
	Temperature	32°F to 140°F (0°C to 60°C)
	Humidity	5% to 95% RH non-condensing
	Altitude	15,000ft (4572m) max.
Storage Temperature		−4°F to 185°F (−20°C to 85°C)
Mounting		Freestanding, wall mount (included)
Dimensions		4.5"W x 4.8"D x 1.6"H (11.4cmW x 12.2cmD x 4.1cmH)
Weight		1.2lb (0.534kg)
Certifications		ETL listed; CE; conforms to UL 61010-1, EN 61010; EN 61326-1; EN 301489-1; certified to CSA C22.2 NO, 61010.1; RoHS compliant; FCC ID X7J-A11072401 and MCQ-XB900HP; IC 8975A-A11072401 and 1846A-XB900HP

Table E.2 WiNG-RXT Technical Specifications (continued)

WiNG Sensors

Power		3.6V AA lithium battery
Battery Life		Up to 5 years when system spans full operating range Up to 8 years at room temperature up to 122°F (50°C) Up to 12 years at room temperature
Shelf Life		10 years in quiescent mode with battery installed
Transmission		
	Interval	10-20 seconds (random)
	Frequency	900 MHz
	Range	Up to 600 ft (183m) line of sight
Temperature Sensor Accuracy		
	Typical	+/- 0.2°C from 10°C to 60°C +/- 0.5°C from -40°C to 85°C
	Maximal	+/- 0.4°C from 10°C to 60°C +/- 1.0°C from -40°C to 85°C
Temperature and Humidity Sensor Accuracy		

Table E.3 WiNG Sensor Technical Specifications

	Typical Temperature	+/- 0.3°C from -40°C to 85°C
	Maximal Temperature	+/- 0.4°C from -40°C to 85°C
	Typical Humidity	+/- 2% from 0%RH to 100%RH, 0°C to 85°C
	Maximal Humidity	+/- 3% from 0%RH to 100%RH at 25°C
	NOTE: The sensor shows the best performance over the range of 20%RH to 80%RH, 5°C to 60°C. Prolonged exposure outside of that range will impact humidity accuracy.	
Operating Environment		
	Temperature	-13°F to 185°F (-25°C to 85°C)
	Altitude	-200ft to 15,000ft (-70m to 4572m) max.
Mounting		Free standing, magnets (included), 1U screw, 15mm mini din rail, zip ties
Dimensions		2.8"L x 1.1"W x 1.1"H (7.1cmL x 2.8cmW x 2.8cmH)
Weight		0.08lb (0.036kg)
Certifications		CE; FCC ID XJ7-A11072401; IC 8975A-A11072401

Table E.3 WiNG Sensor Technical Specifications (continued)